

BMW

Warning Lights & Indicators

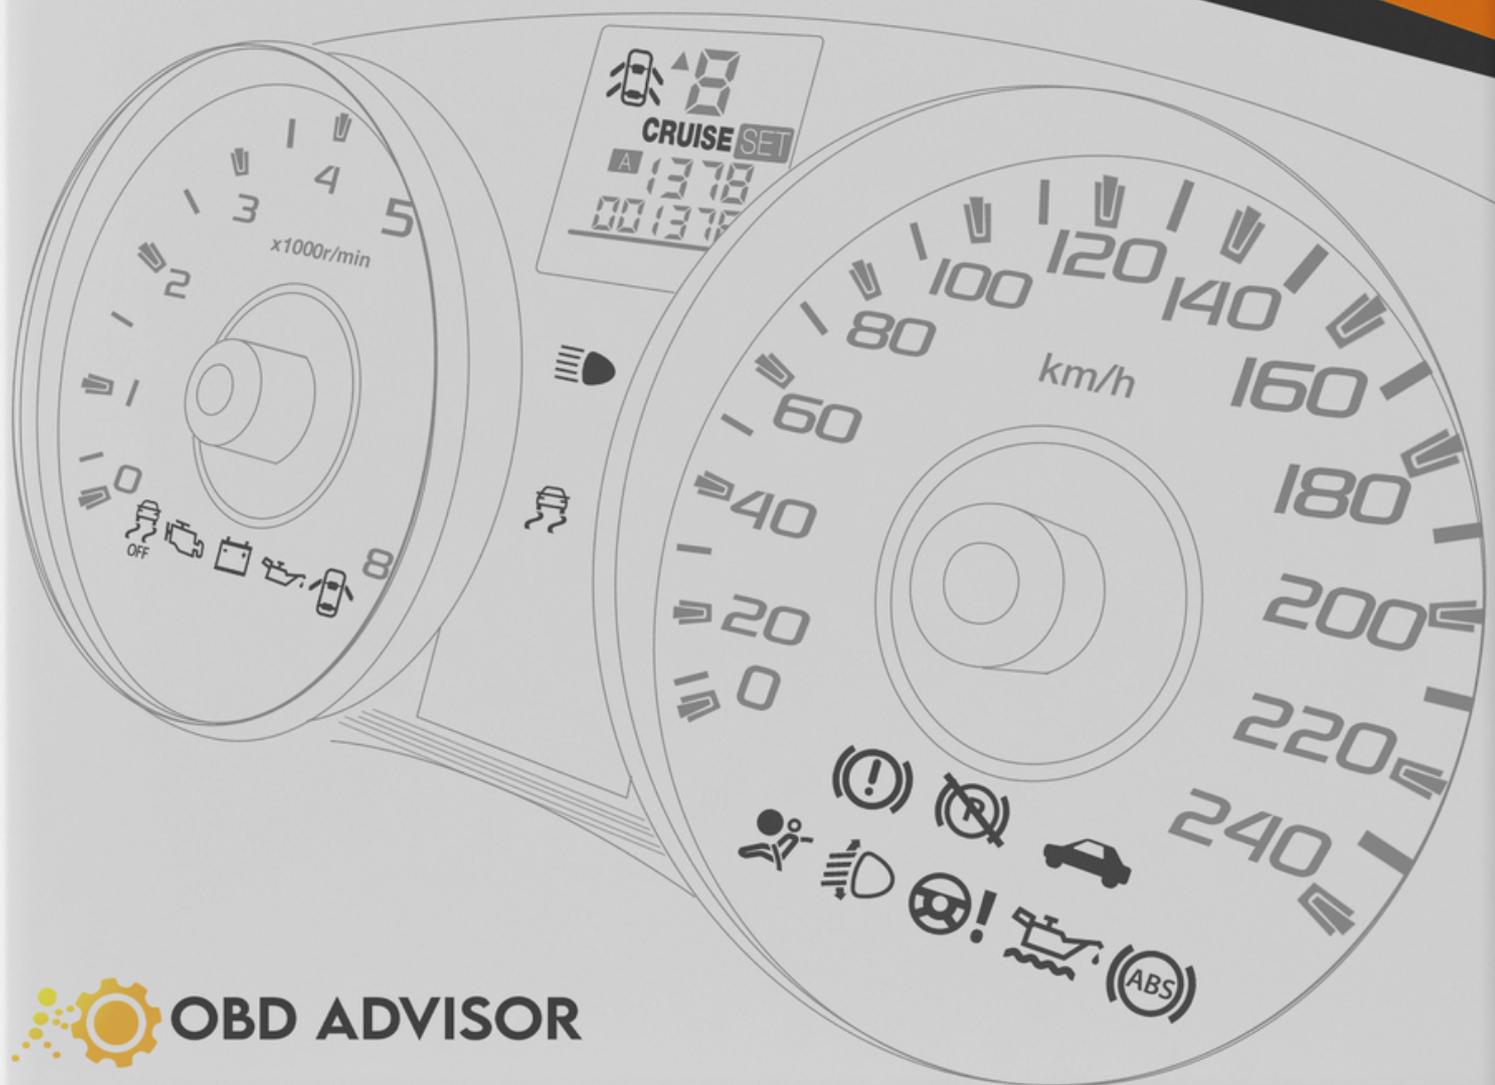


TABLE OF CONTENTS



Red Warning Lights 3

Yellow Warning Lights 5

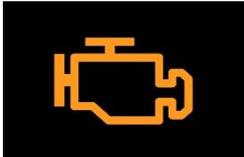
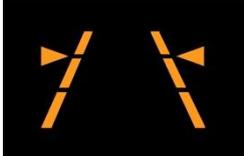
Green Indicators 7

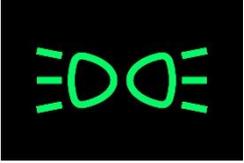
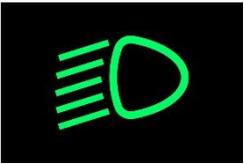
Blue, Gray, & White Indicators 10

Symbol	Name	Meaning
	Safety Belt Reminder	Indicator light flashes or is illuminated: Safety belt on the driver or passenger side is not buckled. The safety belt reminder can also be activated if objects are placed on the front passenger seat. Make sure that the safety belts are positioned correctly.
	Safety Belt Reminder For Rear Seats	The safety belt is not buckled on the corresponding rear seat.
	Airbag System	Airbag system and belt tensioner may not be working. Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.
	Parking Brake	The parking brake is set.
	Brake System	Braking system impaired. Continue to drive moderately. Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.
		
	Approach Control Warning With Light Braking Function	The indicator light is illuminated: pre-warning. Brake and increase distance. Indicator light flashes and an acoustic signal sounds: acute warning. Brake and make an evasive maneuver, if necessary.

	Intersection Collision Warning	The indicator light is illuminated: risk of collision with crossing vehicle.
	Intersection Collision Warning	Indicator light is illuminated: risk of collision with vehicle without detectable driving direction or pre-warning for vehicles that cross own driving direction. Intervene yourself, for instance by braking. Indicator light flashes and an acoustic signal sounds: acute warning when vehicles cross own driving direction. Brake and make an evasive maneuver, if necessary.
	Pedestrian Warning With City Collision Mitigation	Indicator light flashes and an acoustic signal sounds: imminent collision with a detected person or a cyclist. Intervene immediately by braking or make an evasive maneuver.
	Night Vision With Pedestrian And Animal Detection	An infrared camera scans the area in front of the vehicle and issues a warning if it detects pedestrians and animals on the street. The indicator light is illuminated: pre-warning. Brake and make an evasive maneuver, if necessary.
	Night Vision With Pedestrian And Animal Detection	Indicator light flashes and an acoustic signal sounds: acute warning. Immediate braking or evading maneuver.
	Active Cruise Control With Stop&Go Function	Indicator light flashes and an acoustic signal sounds: braking and evading.
	Steering Assistant	Indicator light flashes and an acoustic signal sounds: the system will be switched off.
	Drive Power	Reduced drive power due to an overheated drivetrain.

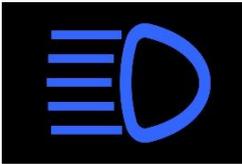
Symbol	Name	Meaning
	Anti-lock Braking System ABS	The Brake Assistant function may not activate. Avoid abrupt braking. Take the longer braking distance into account.
		Have the system immediately checked by a dealer's service center or another qualified service center or repair shop.
	Dynamic Stability Control	<p>The indicator light flashes: DSC controls the drive and braking forces. The vehicle is stabilized. Reduce speed and modify your driving style to the driving circumstances.</p> <p>The indicator light lights up: DSC has malfunctioned. Have the system immediately checked by a dealer's service center or another qualified service center or repair shop.</p>
	Dynamic Stability Control OFF	DSC is deactivated or DTC is activated.
	Flat Tire Monitor	The Flat Tire Monitor signals a loss of tire inflation pressure in a tire. Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
	Tire Pressure Monitor	<p>The indicator light lights up: the Tire Pressure Monitor reports a low tire inflation pressure or a flat tire. Follow the information in the Check Control message.</p> <p>The indicator light flashes and then continuously lights up: no flat tire or loss of tire inflation pressure can be detected.</p> <ul style="list-style-type: none"> ▷ Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again. ▷ A wheel without TPM wheel electronics is mounted: have it checked by a dealer's service

		<p>center or another qualified service center or repair shop as needed.</p> <p>▷ Malfunction: have the system checked by a dealer's service center or another qualified service center or repair shop.</p>
	Steering System	<p>Steering system may not be working.</p> <p>Have the system checked by a dealer's service center or another qualified service center or repair shop.</p>
	Steering Assistant	<p>The indicator light lights up and an acoustic signal may sound: a system interruption is imminent.</p> <p>The indicator warning light flashes: lane marking driven over.</p>
	Emissions	<p>The warning light lights up: Emissions are deteriorating. Have the vehicle checked as soon as possible.</p> <p>The warning light flashes under certain circumstances: This indicates that there is excessive misfiring in the engine. Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.</p>
	Lane Departure Warning	<p>System is switched on and under certain circumstances warns if a detected lane is left without flashing beforehand.</p>

Symbol	Name	Meaning
	Safety Belt Reminder For Rear Seats	The safety belt is buckled on the corresponding rear seat.
	Turn Signal	Turn signal switched on. Unusually rapid flashing of the indicator light indicates that a turn signal bulb has failed.
	Parking Lights	Parking lights are switched on.
	Low Beams	Low beams are switched on.
	Lane Departure Warning	The indicator light lights up: the system is activated. A lane marking was detected on at least one side of the vehicle and warnings can be issued.
	Front Fog Light	Front fog lights are switched on.
	High-Beam Assistant	High-beam Assistant is switched on. High beams are switched on and off automatically depending on the traffic situation.
	Automatic Hold	Automatic Hold is activated. The vehicle is automatically held in place when it is stationary.

	Manual Speed Limiter	The indicator light lights up: the system is switched on. The indicator light flashes: the set speed limit has been exceeded.
	Cruise Control	Indicator light is illuminated: the system is active.
	Active Cruise Control With Stop&Go Function	The indicator light lights up: the system is switched on.
	Speed Limit Assistant	Depending on the equipment, indicator light illuminates together with the icon for a cruise control system: Speed Limit Assistant is active and detected speed limits can be applied manually for the displayed system.
	Speed Limit Assistant	Indicator light illuminates: the detected speed limit can be applied with the SET button. As soon as the speed limit has been applied, a green checkmark is displayed.
	Steering Assistant	Indicator light lights up: the system supports the driver in keeping the vehicle within the lane.
	Lane Change Assistant	Gray line for lane marking on the appropriate side: system detected a lane change request. Lane change not currently possible.
	Lane Change Assistant	Arrow symbol for lane change green: the system carries out a lane change.

	Lane Change Assistant	Arrow symbol for lane change gray: lane change not possible; functional requirements not met.
	Extended Traffic Jam Assistant	Indicator light is illuminated: the system is active.

Symbol	Name	Meaning
	High Beams	High beams are switched on.
	Drive Power	Reduced drive power due to a cold drivetrain.
	Active Cruise Control With Stop&Go Function	Indicator light is illuminated: the system is interrupted. Indicator light flashes: the conditions are not adequate for the system to work or the system has been deactivated.
	Steering Assistant	Indicator light is illuminated: the system is ready.
	Extended Traffic Jam Assistant	Indicator light is illuminated: the system is interrupted.
	Extended Traffic Jam Assistant	Indicator light is illuminated: the system is ready.

Questions? Contact us.



www.obdadvisor.com
obdadvisor.scanner@gmail.com