

HONDA

Warning Lights & Indicators

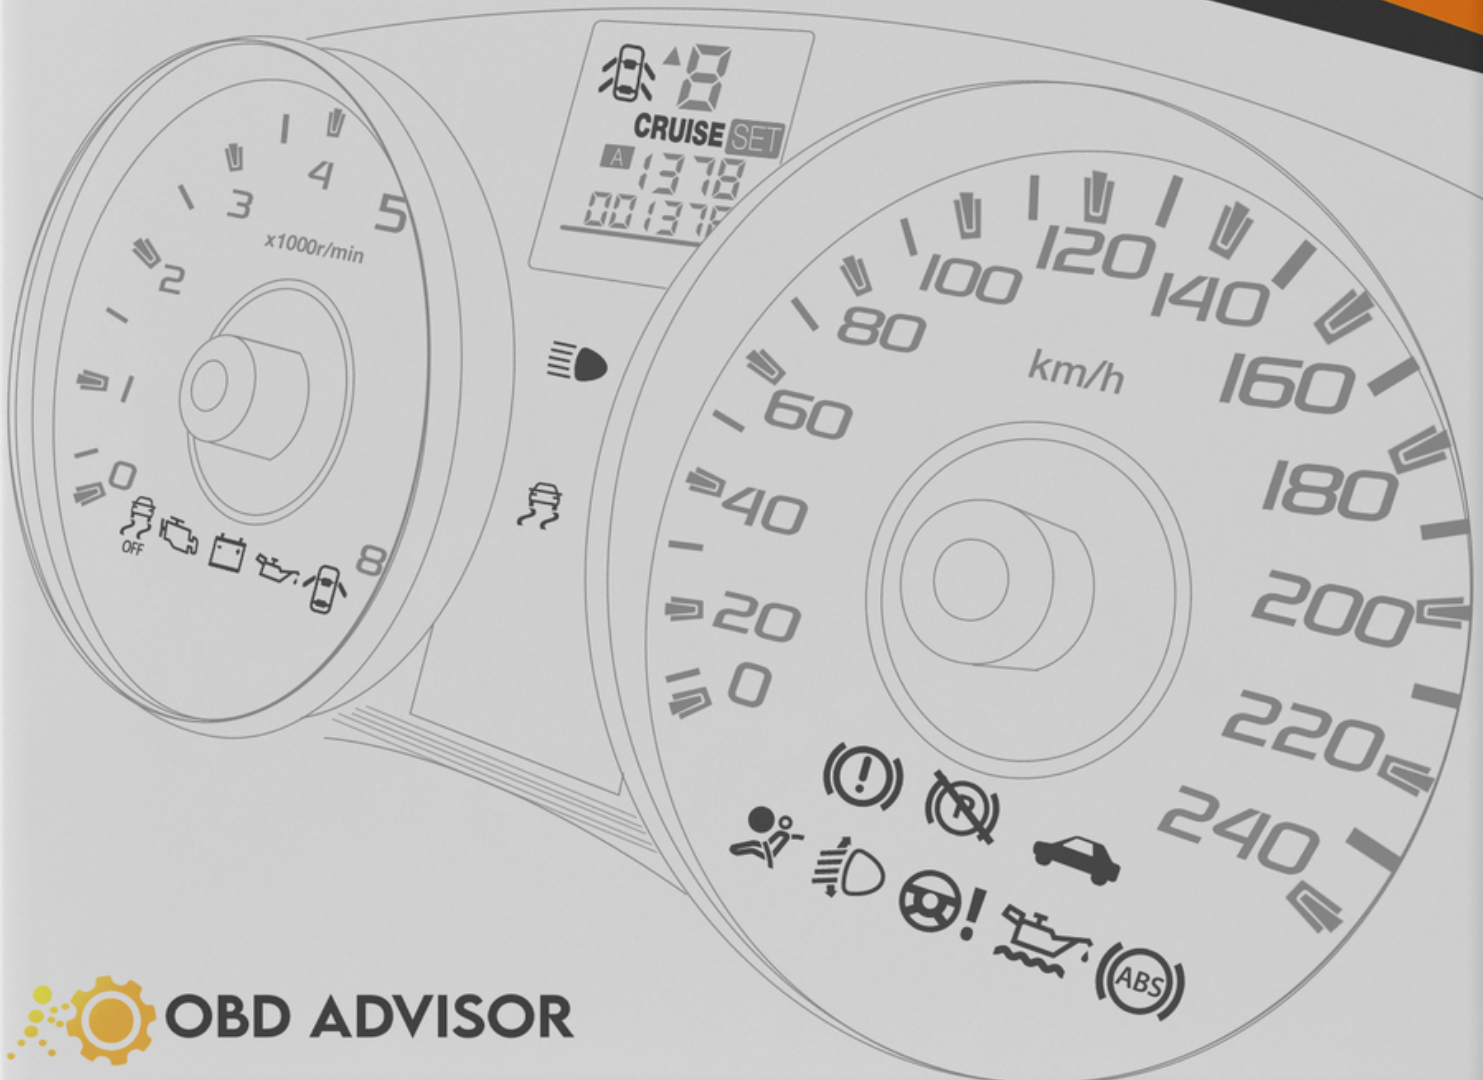


TABLE OF CONTENTS









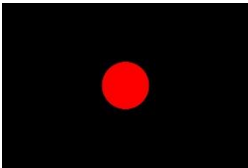
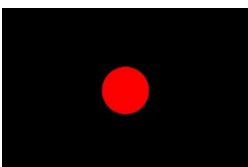

Red Warning Lights	3
--------------------	---




Yellow Warning Lights	6
-----------------------	---

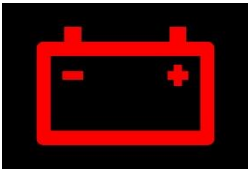




Green Indicators	16
------------------	----




Blue, Gray, & White Indicators	20
--------------------------------	----






Symbol	Name	Meaning
	Parking Brake & Brake System Indicator	Comes on when the parking brake is applied and goes off when it is released.
		<p>Comes on when the brake fluid level is low. Make sure the parking brake is released. Stop in a safe place and check the brake fluid level.</p> <p>Comes on if there is a problem with the brake system.</p> <p><i>1.5 L engine models:</i></p> <p>Comes on along with the Parking Brake and Brake System Indicator (amber): Immediately stop in a safe place. Contact a dealer for repair. The brake pedal becomes harder to operate. Depress the pedal further than you normally do.</p> <p><i>All models:</i></p> <p>Comes on along with the ABS indicator: Have your vehicle checked by a dealer.</p> <p>Blinks and the Parking Brake and Brake System Indicator (amber) comes on at the same time: There is a problem with the electric parking brake system. The parking brake may not be set. Avoid using the parking brake and have your vehicle checked by a dealer immediately.</p>
	Charging System Indicator	<p>Comes on when there is a problem with the charging system.</p> <p>Stop in a safe place and contact a dealer immediately.</p>
	Seat Belt Reminder Indicator	<p>Blinks and the beeper sounds for a few seconds if you are not wearing a seat belt when you set the power mode to ON, then the indicator comes on.</p> <p>If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later.</p> <p>Comes on for a while when the rear seat belt is unfastened while the power mode in ON.</p> <p>Blinks while driving if you and/or any passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals. The beeper stops and the</p>





		<p>indicator goes off when you and the passengers fasten their seat belts.</p> <p>Stays on after you and/or the passengers have fastened the seat belt(s) - A detection error may have occurred in the sensor. Have your vehicle checked by a dealer.</p>
	<p>Supplemental Restraint System Indicator</p>	<p>Comes on if a problem with any of the following is detected:</p> <ul style="list-style-type: none"> - Supplemental Restraint System - Side airbag system - Side curtain airbag system - Seat belt tensioner <p>Stays on constantly - Have your vehicle checked by a dealer.</p>
	<p>Electric Power Steering System Indicator</p>	<p>Comes on if there is a problem with the EPS system.</p> <p>Stays on constantly - Have your vehicle checked by a dealer.</p> <p>Do not drive displays on the driver information interface - Immediately stop in a safe place and contact a dealer.</p>
	<p>Immobilizer System Indicator</p>	<p>Blinks if the immobilizer system cannot recognize the key information.</p> <p>Blinks - You cannot start the engine. Set the power mode to VEHICLE OFF, then select the ON mode again.</p> <p>Repeatedly blinks - The system may be malfunctioning. Have your vehicle checked by a dealer.</p> <p>Do not attempt to alter this system or add other devices to it. Electrical problems can occur.</p>
	<p>Security System Alarm Indicator</p>	<p>Blinks when the security system alarm has been set.</p>
	<p>Low Oil Pressure Indicator</p>	<p>Comes on when you turn the ignition switch to ON, and goes off when the engine starts.</p> <p>Comes on when the engine oil pressure is low.</p>


		Comes on while driving - Immediately stop in a safe place.
	Electric Parking Brake Indicator	<p>Comes on for a few seconds when you turn the ignition switch to ON, then goes off if the parking brake has been released.</p> <p>Comes on when the parking brake is applied, and goes off when it is released.</p> <p>Comes on for about 15 seconds when you pull the electric parking brake switch while the ignition switch is in LOCK.</p> <p>Stays on for about 15 seconds when you turn the ignition switch to LOCK while the electric parking brake is set.</p> <p>Blinks and the electric parking brake system indicator comes on at the same time - There is a problem with the electric parking brake system. The parking brake may not be set.</p>
	High Temperature Indicator	<p>Comes on for a few seconds when you turn the ignition switch to ON, then goes off.</p> <p>Blinks when the engine coolant temperature goes up, and stays on if the temperature continues to rise.</p> <p>Goes off, then comes on in blue when the engine coolant temperature is low.</p> <p>Blinks while driving - Drive slowly to prevent overheating.</p> <p>Stays on while driving - Immediately stop in a safe place and allow the engine to cool.</p>
	Door and Tailgate Open Indicator	<p>Comes on for a few seconds if you turn the ignition switch to ON, then goes off.</p> <p>Comes on if any door or the tailgate is not completely closed.</p> <p>The beeper sounds and the indicator comes on if any door or the tailgate is opened while driving.</p> <p>Goes off when all doors and the tailgate are closed.</p>


Symbol	Name	Meaning
	Parking Brake and Brake System Indicator	Comes on if there is a problem with a system related to braking other than the conventional brake system. Comes on while driving - Have your vehicle checked by a dealer.
		With this indicator on, your vehicle still has normal braking ability. Comes on if there is a problem with the electric parking brake system and/or the automatic brake hold system. Stays on constantly - Avoid using the parking brake and have your vehicle checked by a dealer immediately.
	Malfunction Indicator Lamp	After you have set the power mode to ON, the vehicle performs system checks. However, if the readiness codes have not been set by that time, this indicator will blink five times and then go off. Readiness codes are part of the on-board diagnostics for the emissions control systems Comes on if there is a problem with the emissions control systems. Blinks when a misfire in the engine's cylinders is detected.
	Low Fuel Indicator	Comes on when the fuel reserve is running low (approximately 1.8 U.S. gal/7.0 Liter left). Refuel your vehicle as soon as possible. Blinks if there is a problem with the fuel gauge. Have your vehicle checked by a dealer.
	Anti-lock Brake System Indicator	Comes on if there is a problem with the ABS. Stays on constantly - Have your vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function.


	<p>Vehicle Stability Assist System Indicator</p>	<p>Blinks when VSA is active.</p> <p>Comes on if there is a problem with the VSA system, brake assist system, hill start assist system, starting assist brake function, or agile handling assist.</p> <p>Stays on constantly - Have your vehicle checked by a dealer.</p> <p>Comes on if the VSA system is deactivated temporarily after the battery has been disconnected, then re-connected. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.</p>
	<p>Vehicle Stability Assist OFF Indicator</p>	<p>Comes on when you partially disable VSA.</p> <p><i>Models without Auto Idle Stop:</i></p> <p>Comes on when you press and hold the (VSA OFF) button while +R mode is selected.</p> <p><i>Models with A-type meter:</i></p> <p>Comes on if the VSA system is deactivated temporarily after the battery has been disconnected, then re-connected. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.</p>
	<p>Low Tire Pressure/TPMS Indicator</p>	<p>May come on briefly if the power mode is set to ON and the vehicle is not moved within 45 seconds, to indicate the calibration process is not yet complete.</p> <p>Comes on and stays on when: One or more tires' pressures are determined to be significantly low. The system has not been calibrated.</p> <p>Comes on while driving - Stop in a safe place, check tire pressures, and inflate the tire(s) if necessary.</p> <p>Stays on after the tires are inflated to the recommended pressures - The system needs to be calibrated.</p> <p>Blinks for about one minute, and then stays on if there is a problem with the TPMS, or when a</p>





		<p>compact spare tire is temporarily installed. Blinks and remains on - Have your vehicle checked by a dealer. If the vehicle is fitted with a compact spare tire, get your regular tire repaired or replaced and put back on your vehicle as soon as you can.</p> <p>Comes on if the TPMS is deactivated temporarily after the battery has been disconnected, then re-connected. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.</p>
	System Message Indicator	Comes on along with a beep when a problem is detected. A system message on the driver information interface appears at the same time.
	SPORT Mode Indicator	Comes on when you set the drive mode to SPORT.
	Auto Idle Stop OFF Indicator	Comes on when the Auto Idle Stop system has been turned off by the Auto Idle Stop OFF button.
	Auto Idle Stop System Indicator	<p>Blinks if there is a problem with the Auto Idle Stop system.</p> <p>Have your vehicle checked by a dealer.</p>
	Adaptive Cruise Control With Low Speed Follow Indicator	<p>Comes on if there is a problem with ACC with Low Speed Follow</p> <p>Comes on while driving - Have your vehicle checked by a dealer.</p>




		<p>Comes on if the ACC with Low Speed Follow is deactivated temporarily after the battery has been disconnected, then reconnected. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.</p> <p>Indicator may come on temporarily when the Maximum Load Limit is exceeded.</p> <p>ACC with Low Speed Follow has been automatically canceled. Make sure the total load is within the Maximum Load Limit.</p> <p>Stays on constantly - Have your vehicle checked by a dealer.</p>
	<p>Lane Keeping Assist System Indicator</p>	<p>Comes on if there is a problem with the LKAS.</p> <p>Stays on constantly - Have your vehicle checked by a dealer</p> <p>Indicator may come on temporarily when the Maximum Load Limit is exceeded. Make sure the total load is within the Maximum Load Limit.</p> <p>Stays on constantly - Have your vehicle checked by a dealer.</p>
		
	<p>Safety Support Indicator</p>	<p>Comes on if there is a problem with Road Departure Mitigation system, CMBS, Low Speed Braking Control or blind spot information system.</p> <p>Stays on constantly - Have your vehicle checked by a dealer.</p> <p>Indicator may come on temporarily when the Maximum Load Limit is exceeded. Make sure the total load is within the Maximum Load Limit.</p> <p>Comes on if the Road Departure Mitigation system, CMBS and Low Speed Braking Control are deactivated temporarily after the battery has been disconnected and then re-connected. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.</p> <p>Comes on when the Road Departure Mitigation system and/or CMBS shuts itself off.</p>




		<p>Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down.</p> <p>Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth. Have your vehicle checked by a dealer if the indicator and message are still displayed even after you have cleaned the area around the camera.</p> <p>It may come on when the ambient conditions are dark, such as when driving in a tunnel, or at night, dawn, or dusk.</p> <p><i>Models with Low Speed Braking Control:</i></p> <p>Comes on when mud, snow, or ice accumulates in the vicinity of the sonar sensor. Remove the obstacle in the vicinity of the sonar sensor.</p> <p><i>Models with blind spot information system:</i></p> <p>Comes on when mud, snow, or ice accumulates in the vicinity of the blind spot information system sensor.</p> <p>Comes on when the temperature of the blind spot information system sensor is high.</p> <p>Comes on while driving - Something may be interfering with the blind spot information system sensor. Check the vicinity of the blind spot information system sensor and remove any obstacles. The system will return to normal when the temperature cools down.</p>
	<p align="center">Blind spot information System Indicator</p>	<p>Comes on for a few seconds when you set the power mode to ON, then goes off.</p> <p>Stays on while blind spot information system is turned off.</p> <p>Comes on when mud, snow, or ice accumulates in the vicinity of sensor.</p> <p>Comes on while driving - Remove the obstacle in the vicinity of sensor.</p> <p>Comes on if there is a problem with the system.</p>






 

		Comes on while driving - Have your vehicle checked by a dealer.
	Road Departure Mitigation Indicator	<p>Comes on for a few seconds when you turn the ignition switch to ON, then goes off.</p> <p>Comes on if there is a problem with the RDM system.</p> <p>Stays on constantly - Have your vehicle checked by a dealer.</p> <p>Comes on if the RDM is deactivated temporarily after the battery has been disconnected, then re-connected. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.</p> <p>Comes on when the RDM system shuts itself off. Indicator may come on temporarily when passing through an enclosed space, such as a tunnel. The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. Have your vehicle checked by a dealer if the indicator does not go off even after you clean the sensor cover.</p> <p>Comes on when the RDM system shuts itself off.</p> <p>Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down.</p> <p>Comes on when the RDM system shuts itself off.</p> <p>Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. Have your vehicle checked by a dealer if the indicator and message come back on after you cleaned the area around the camera.</p> <p>Indicator may come on temporarily when the Maximum Load Limit is exceeded. Make sure the total load is within the Maximum Load Limit.</p>









		Stays on constantly - Have your vehicle checked by a dealer.
	Collision Mitigation Braking System Indicator	<p>Comes on for a few seconds when you turn the ignition switch to ON, then goes off.</p> <p>Comes on when you deactivate the CMBS. A driver information interface message appears for five seconds.</p> <p>Comes on if there is a problem with the CMBS.</p> <p>Stays on constantly without the CMBS off - Have your vehicle checked by a dealer.</p> <p>Comes on if the CMBS is deactivated temporarily after the battery has been disconnected, then re-connected. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.</p> <p>Comes on when the CMBS shuts itself off.</p> <p>Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth.</p> <p>Have your vehicle checked by a dealer if the indicator does not go off even after you cleaned the camera. Indicator may come on temporarily when passing through an enclosed space, such as a tunnel. The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. Have your vehicle checked by a dealer if the indicator does not go off even after you clean the sensor cover.</p> <p>Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down.</p> <p>Indicator may come on temporarily when the Maximum Load Limit is exceeded. Make sure the total load is within the Maximum Load Limit.</p>









		Stays on constantly - Have your vehicle checked by a dealer.
	All-wheel drive (AWD) Indicator	<p>Comes on for a few seconds when you set the power mode to ON, then goes off.</p> <p>Comes on if there is a problem with the AWD system.</p> <p>Blinks when the differential temperature is too high.</p> <p>Stays on constantly - The engine drives the front wheels only in this state. Have your vehicle checked by a dealer.</p> <p>Blinks while driving - Stop in a safe place, change to "P", and idle the engine until the indicator goes off. If the indicator does not stop blinking, take your vehicle to a dealer.</p>
	POWER SYSTEM Indicator	<p>Comes on if there is a problem with the electric vehicle system.</p> <p>Comes on when the High Voltage battery temperature becomes high. Have your vehicle checked by a dealer.</p>
	Low Fuel Indicator	<p>Comes on when the vehicle is running low on fuel (3 or 2 fuel gauge bars illuminated).</p> <p>Refuel your vehicle as soon as possible.</p>
	Hydrogen Leak Indicator	<p>Comes on for a few seconds when you set the power mode to ON, then goes off.</p> <p>Comes on if a small hydrogen gas leak is detected. Your vehicle has less ability to accelerate and may be harder to start on an incline. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.</p> <p>Comes on if a hydrogen gas leak is detected. Generating electricity by the fuel cell is stopped. Immediately stop in a safe place and have your</p>


 


		vehicle checked by an authorized Honda Clarity Fuel Cell dealer.
	Electric Parking Brake System Indicator	<p>Comes on for a few seconds when you turn the ignition switch to ON, then goes off.</p> <p>Comes on if there is a problem with the electric parking brake system.</p> <p>Comes on while driving - Avoid using the parking brake and have your vehicle checked by a dealer immediately.</p>
	Brake Depressing Indicator	<p>Comes on for a few seconds when you turn the ignition switch to ON, then goes off.</p> <p><i>Electric Parking Brake System</i></p> <p>Comes on when the electric parking brake switch is pressed without depressing the brake pedal while the electric parking brake is in operation.</p> <p>Comes on while driving - Press the electric parking brake switch with the brake pedal depressed.</p> <p><i>Automatic Brake Hold System</i></p> <p>Comes on when the automatic brake hold button is pressed without depressing the brake pedal while the automatic brake hold is in operation.</p> <p>Blinks if the automatic brake hold is automatically canceled while it is in operation. The beeper sounds.</p> <p>Comes on while driving - Press the automatic brake hold button with the brake pedal depressed. Immediately depress the brake pedal.</p>
	Smart Entry System Indicator	<p>Comes on for a few seconds when you set the power mode to ON, then goes off.</p> <p>Comes on as soon as a problem is detected in the smart entry system or push button starting system. Stays on constantly or does not come on at all - Have your vehicle checked by a dealer.</p>







	Maintenance Minder Indicator	Comes on when the scheduled maintenance is due soon.
	All-Wheel Drive (AWD) System Indicator	<p>Comes on for a few seconds when you turn the ignition switch to ON, then goes off.</p> <p>Comes on if there is a problem with the AWD.</p> <p>Blinks when the AWD system is overheated. The system is inactive.</p> <p>Stays on constantly - the engine drives only the front wheels in this state. Have your vehicle checked by a dealer.</p> <p>Blinks while driving - the engine drives only the front wheels in this state. Stop in a safe place, shift to "P", and idle the engine until the indicator goes off. If the indicator does not stop blinking, take your vehicle to a dealer.</p>
	Bed Lights On Indicator	<p>Comes on when the bed lights are on.</p> <p>Comes on for 30 minutes when you set power mode to ACCESSORY or VEHICLE OFF without turning off the bed lights, then goes off.</p>






Symbol	Name	Meaning
	Automatic Brake Hold System Indicator	Comes on when the automatic brake hold system is on.
	Automatic Brake Hold Indicator	Comes on when the automatic brake hold is activated.
		
	Shift Up Indicator	Comes on when shifting up is recommended.
	Shift Down Indicator	Comes on when shifting down is recommended.
	Turn Signal and Hazard Warning Indicators	<p>Blinks when you operate the turn signal lever.</p> <p>Blinks along with all turn signals when you press the hazard warning button.</p> <p>Does not blink or blinks rapidly.</p>
	Lights On Indicator	<p>Comes on when the light switch is in a position other than OFF or when the switch is set to AUTO and the exterior lights come on.</p> <p>If you remove the key from the ignition switch while the exterior lights are on, a chime sounds when the driver's door is opened.</p>




	Auto High-Beam Indicator	Comes on when all the operating conditions of the auto high-beam are met.
	Fog Light Indicator	Comes on when the fog lights are on.
	ECON Mode Indicator	<i>Models without drive mode switch</i> Comes on when the ECON mode is on.
		<i>Models with drive mode switch</i> Comes on when you set the drive mode to ECON.
	Cruise Mode Indicator	Lights up in green when you have set a speed for cruise control.
	Auto Idle Stop Indicator	Comes on when Auto Idle Stop is in operation. The engine automatically shuts off.
	Adaptive Cruise Control With Low Speed Follow Indicator	Lights up in green when you press the RES/+ / SET/- switch up or down.
		



	Lane Keeping Assist System Indicator	Lights up in green when the LKAS is in operation.
		
	Safety Support Indicator	<p>Lights up in green when Road Departure Mitigation system, CMBS, Low Speed Braking Control and blind spot information system are on.</p> <p>Lights up in green and gray when Road Departure Mitigation system, CMBS, Low Speed Braking Control, blind spot information system or any two or three of these systems are off.</p>
		
	EV Indicator	Comes on when the vehicle is moved by the motor, and the engine is not operating.
		
	HV Indicator	<p>Comes on for a few seconds when you set the power mode to ON, then goes off.</p> <p>Comes on when the vehicle is in HV.</p> <p>Comes on when the vehicle is in HV charge.</p>
		




	HV Charge Indicator	<p>Comes on for a few seconds when you set the power mode to ON, then goes off.</p> <p>Comes along with the HV indicator when the vehicle is in HV charge.</p>
	Immobilizer System Indicator	<p>Comes on briefly when you turn the ignition switch to ON, then goes off.</p> <p>Comes on if the immobilizer system cannot recognize the key information.</p> <p>Blinks - <i>Models without smart entry system</i></p> <p>You cannot start the engine. Turn the ignition switch to LOCK, pull the key out, and then insert the key and turn it to ON again.</p> <p>Blinks - <i>Models with smart entry system</i></p> <p>You cannot start the engine. Set the power mode to VEHICLE OFF (LOCK), then select the ON mode again.</p> <p>Repeatedly blinks - The system may be malfunctioning. Have your vehicle checked by a dealer.</p> <p>Do not attempt to alter this system or add other devices to it. Electrical problems can occur.</p>
	CRUISE MAIN Indicator	<p>Comes on when you press the CRUISE button.</p>
	CRUISE CONTROL Indicator	<p>Comes on if you have set a speed for cruise control.</p>

Symbol	Name	Meaning
	High Beam Indicator	Comes on when the high beam headlights are on.
	Low Temperature Indicator	Comes on while the engine coolant temperature is low, then goes off once the engine reaches normal operating temperature. If the indicator stays on after the engine has reached normal operating temperature, there may be a problem with the temperature sensors. Have your vehicle inspected by a dealer.
	Safety Support Indicator	Lights up in green and gray when Road Departure Mitigation system, CMBS, Low Speed Braking Control, blind spot information system or any two or three of these systems are off. Lights up in gray when Road Departure Mitigation system, CMBS, Low Speed Braking Control and blind spot information system are off.
	INDIVIDUAL Mode Indicator	Comes on when you set the drive mode to INDIVIDUAL
	COMFORT Mode Indicator	Comes on when you set the drive mode to COMFORT
	+R Mode Indicator	Comes on when you set the drive mode to +R.

	Cruise Mode Indicator	Lights up in white when you change to cruise mode.
	Adaptive Cruise Control With Low Speed Follow Interval Indicator	Comes on when Adaptive Cruise Control (ACC) with Low Speed Follow indicator comes on.
	Auto Idle Stop Suspend Indicator	<p>Comes on while Auto Idle Stop is temporarily suspended in the following situations.</p> <p>Continuously variable transmission models</p> <p>Brake pedal is not fully pressed. Depress the brake pedal firmly</p> <p>Continuously variable transmission models</p> <ul style="list-style-type: none"> - The transmission is in a position other than " " - System charging is prioritized. - Climate control system is prioritized. - Engine coolant temperature is not in operating range. - SPORT mode* is selected. - The battery temperature is too low. - Auto Idle Stop does not activate for some reason.
	Adaptive Cruise Control With Low Speed Follow Indicator	Lights up in white when you press the " " button
	Lane Keeping Assist System Indicator	Lights up in white when you press the LKAS button.

Normal	Intelligent Traction Management Indicator	<p>Comes on when pressing the Intelligent Traction Management button. The mode you select appears on the driver information interface. When the vehicle is turned off and restarted, Intelligent Traction Management mode will revert to Normal.</p> <p>Normal Provides balanced driving performance on most road surfaces.</p> <p>Snow Use when driving on snowy road surfaces.</p> <p>Mud Use when driving on muddy road or offroad surfaces.</p> <p>Sand Use when driving on soft, sandy road or off-road surfaces.</p>
Snow		
 Snow		
Mud		
 Mud		
Sand		
 Sand		
D	Shift Position Indicator	Indicates the current shift position.

	M (sequential mode/7-speed manual shift mode) Indicator/Gear Selection Indicator	<p>Comes on when the sequential mode/7-speed manual shift mode is applied.</p>
	Transmission System Indicator	<p>The current shift position blinks if the transmission system has a problem.</p> <p>Blinks while driving - Avoid sudden starts and acceleration and have your vehicle checked by a dealer immediately.</p> <p>The indicated current shift position blinks if you cannot put the transmission into "R" due to a transmission system failure. Avoid sudden starts, sudden acceleration and high speed, and have your vehicle checked by a dealer immediately.</p> <p>The indicated current shift position blinks if the transmission system has a problem and the performance of the vehicle is reduced. Avoid sudden starts, sudden acceleration and high speed, and have your vehicle checked by a dealer immediately.</p> <p>The indicated current shift position blinks if the transmission system has a problem and the paddle shifters cannot be used. Have your vehicle checked by a dealer immediately.</p> <p>The current shift position or all the shift positions blink if there is a problem with the transmission and the vehicle is no longer able to run.</p> <ul style="list-style-type: none"> • Immediately park your car in a safe place. • Have your vehicle checked by a dealer. <p>The current shift position or all the shift positions blink if there is a problem with the transmission and it is not possible to select "P".</p> <ul style="list-style-type: none"> • Depending on the circumstances, you can set the power mode to ON as an emergency measure. • While the vehicle is stopped, apply the parking brake. • Have your vehicle checked by a dealer immediately.

		<p>Blinks if the transmission system has a problem.</p> <p>Blinks while driving - Avoid sudden starts and acceleration and have your vehicle checked by a dealer immediately.</p> <p>Blinks if the transmission system has a problem and the performance of the vehicle is reduced. Avoid sudden starts, sudden acceleration and high speed, and have your vehicle checked by a dealer immediately.</p> <p><i>Models with paddle shifters:</i> Blinks if the transmission system has a problem and the paddle shifters cannot be used. Have your vehicle checked by a dealer immediately</p>
	Deceleration Paddle Selector Indicator	<p>Comes on when the selector is pulled.</p> <p>Blinks when the rate of deceleration does not change while pulling the selector.</p> <p>Comes on with M when SPORT mode is selected and pulling the selector.</p>
		
	Gear Position Indicator	<p>Indicates 1st to 6th gear position.</p> <p>If you shift gears very slowly, a different gear position may be displayed for a moment.</p> <p>The display can be turned ON/OFF in customized features in driver information interface or audio/information screen.</p> <p>Under the following conditions, gear positions and frame borders are not displayed.</p> <p>The select lever is in "R" position.</p> <p>The display of gear position indicator is turned OFF in customized features.</p> <p>Under the following conditions, gear positions are not displayed.</p> <p>The vehicle is stopped (approximately less than 2 mph or 3 km/h)</p> <p>The select lever is in "N" position.</p>

Questions? Contact us.



www.obdadvisor.com
obdadvisor.scanner@gmail.com