

INFINITI

Warning Lights & Indicators

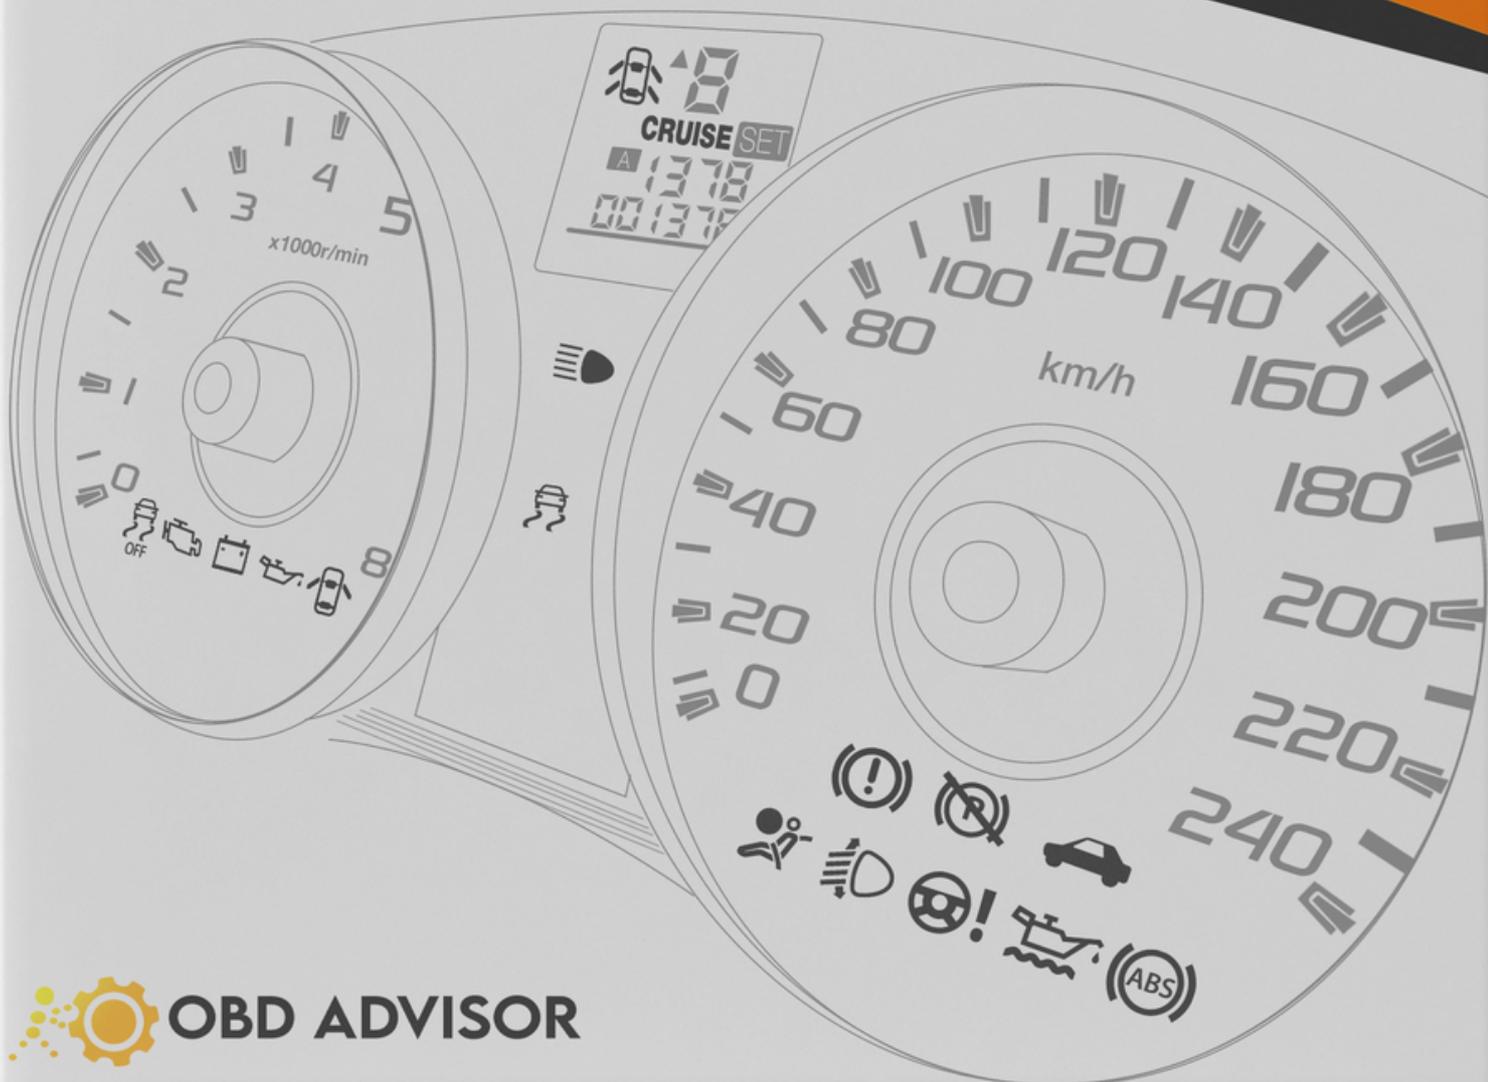
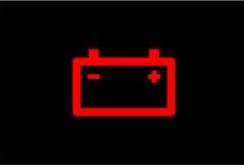


TABLE OF CONTENTS



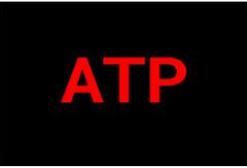
| | |
|--------------------------------|----|
| Red Warning Lights | 3 |
| Yellow Warning Lights | 8 |
| Green Indicators | 19 |
| Blue, Gray, & White Indicators | 21 |

| Symbol | Name | Meaning |
|---|---|---|
|  | <p>Brake Warning Light</p> | <p>This light functions for both the parking brake and the foot brake systems.</p> <p>Parking brake indicator: When the ignition switch is in the ON position, the light comes on when the parking brake is applied.</p> |
|  | <p>Brake Warning Light</p> | <p>Low brake fluid warning: When the ignition switch is in the ON position, the light warns of a low brake fluid level. If the light comes on with the parking brake not applied, stop the vehicle and perform the following:</p> <ol style="list-style-type: none"> 1. Check the brake fluid level. If brake fluid is low, add fluid and have the system checked. It is recommended you have this service performed by an INFINITI retailer. 2. If the brake fluid level is correct, have the warning system checked. It is recommended you have this service performed by an INFINITI retailer. <p>Brake system malfunction warning: If the brake warning light (red) and the following warning light illuminate at the same time when the parking brake is released and the brake fluid level is sufficient, there may be a malfunction in the brake system.</p> |
|  | <p>Charge Warning Light</p> | <p>If this light comes on while the engine is running, it may indicate the charging system is not functioning properly. Turn the engine off and check the generator belt. If the belt is loose, broken, or missing, or if the light remains on, have the system checked. It is recommended that you visit a dealer for this service.</p> |
|  | <p>Electric Shift Control System Warning Light</p> | <p>When the ignition switch is in the ON position, the electric shift control system warning light illuminates, and then turns off. This indicates the electric shift control system is operational. The electric shift control system warning light illuminates when a malfunction occurs in the electric shift control system. When the master warning light illuminates, the chime sounds and the following message is displayed in the vehicle information display: "When parked apply parking brake".</p> |

| | | |
|---|---|--|
| | | When the ignition switch is placed in the OFF position, the chime sounds continuously. Ensure the parking brake is applied. Have the system checked by a dealer. |
|  | Electronic Parking Brake Indicator Light | This light illuminates when the electronic parking brake system is operating. When the ignition switch is placed in the ON position, the electronic parking brake warning light illuminates. When the engine is started and the parking brake is released, the warning light turns off. |
|  | Electronic Parking Brake Indicator Light | If the parking brake is not released, the electronic parking brake warning light remains illuminated. Ensure the electronic parking brake warning light has turned off before driving. If the electronic parking brake warning light illuminates or flashes while the electronic parking brake system warning light illuminates, it may indicate that the electronic parking brake system is not functioning properly. Have the system checked. It is recommended that you visit a dealer for this service. |
|  | Engine Oil Pressure Warning Light | This light warns of low engine oil pressure. If the light flickers or comes on during normal driving, pull off the road in a safe area, stop the engine immediately and call a dealer or other authorized repair shop. The engine oil pressure warning light is not designed to indicate a low oil level. Use the dipstick to check the oil level. |
|  | Master Warning Light | When the ignition is in the ON position, the master warning light illuminates if any of the following are displayed on the vehicle information display. <ul style="list-style-type: none"> • Parking brake release warning • Door open warning (while moving) • Steering alert hands on detection warning The warning(s) remain on the vehicle information display until action is taken, or the ignition is placed in the OFF position. |

| | | |
|---|--|---|
|  | <p>Seat Belt Warning Light</p> | <p>The light and chime remind you to fasten the seat belts.</p> <p>The seat belt warning light will illuminate when the ignition switch is pushed to the ON position if the driver's seat belt is not fastened, or if the front passenger seat belt is not fastened when occupied.</p> <p>The seat belt warning light will also illuminate if a rear passenger seat belt is changed from fastened to unfastened.</p> <p>If the driver's seat belt is not fastened when the ignition switch is pushed to the ON position, the chime will sound shortly.</p> <p>If the vehicle is driven above 9 mph (15km/h) in the conditions that illuminate the seat belt warning light, the lamp will begin to blink and the chime will sound for over one minute, or until the seat belt is fastened again.</p> |
|  | <p>Security Indicator Light</p> | <p>This light blinks when the ignition switch is placed in the OFF, LOCK or AUTO ACC position.</p> <p>The blinking security indicator light indicates that the security systems equipped on the vehicle are operational.</p> |
|  | <p>Air Bag Warning Light</p> | <p>When the ignition switch is placed in the ON or START position, the supplemental air bag warning light illuminates for about 7 seconds and then turns off. This means the system is operational.</p> <p>If any of the following conditions occur, the front airbag, side air bag, curtain airbag, and pretensioner systems need servicing and your vehicle must be taken to a dealer:</p> <ul style="list-style-type: none"> • The supplemental air bag warning light remains on after approximately 7 seconds. • The supplemental air bag warning light flashes intermittently. • The supplemental air bag warning light does not come on at all. <p>Unless checked and repaired, the supplemental restraint system (air bag system) and/or the pretensioners may not function properly.</p> |

| | | |
|---|--|--|
|  | <p>High Temperature Warning Light</p> | <p>When the ignition switch is in the ON position, the high temperature warning light illuminates and then turns off. This indicates that the high temperature sensor in the engine coolant system is operational.</p> |
|  | <p>Power Steering Warning Light</p> | <p>Models with Direct Adaptive Steering:</p> <p>When the ignition switch is in the ON position, the power steering warning light illuminates. After starting the engine, the power steering warning light stays on for a few seconds and turns off. This indicates that Direct Adaptive Steering is operational. Drive the vehicle after the power steering warning light turns off. If the power steering warning light illuminates while driving, pull off the road to a safe location and stop the vehicle. If the power steering warning light turns off, you can drive again. If the power steering warning light continues to illuminate, it is recommended you have Direct Adaptive Steering checked by an INFINITI retailer.</p> <p>Models with electric power steering:</p> <p>When the ignition switch is in the ON position, the power steering warning light illuminates. After starting the engine, the power steering warning light turns off. This indicates the electric power steering is operational. If the power steering warning light illuminates while the engine is running, it may indicate the electric power steering is not functioning properly and may need servicing. It is recommended you have the electric power steering checked by an INFINITI retailer.</p> <p>When the power steering warning light illuminates with the engine running, the power assist to the steering will cease operation but you will still have control of the vehicle. At this time, greater steering efforts are required to operate the steering wheel, especially in sharp turns and at low speeds.</p> |
|  | <p>Distance Warning Light</p> | <p>This light illuminates if the distance to the vehicle in front is too small for the speed selected.</p> |

| | | |
|---|--|--|
| | | <p>If a warning tone also sounds, you are approaching a vehicle or stationary obstacle in your line of travel at too high a speed.</p> |
|  | <p>Automatic Transmission (AT) Park Warning Light</p> | <p>This light indicates that the Automatic Transmission (AT) parking function is not engaged. If the transfer control is not secured in any driving position while the AT shift lever is in the “P” (Park) position, the transmission will disengage and the wheels will not lock.</p> <p>If the AT park warning light illuminates with the shift lever in the P (Park) position, shift the Four-Wheel Drive (4WD) shift switch to the AUTO, 4H or 4L position again with the shift lever in the N (Neutral) position.</p> |
|  | <p>Steering Assist Hands OFF Warning Light</p> | <p>When the Steering Assist is activated, it monitors the driver’s steering wheel operation. If the steering wheel is not operated or the driver takes his/her hands off the steering wheel for a period of time, the warning light illuminates.</p> <p>If the driver does not operate the steering wheel after the warning light has been illuminated, an audible alert sounds and the warning flashes in the vehicle information display, followed by a quick brake application to request the driver to take control of the vehicle again.</p> <p>If the driver remains unresponsive, the vehicle will automatically turn on the hazard lights and slow to a complete stop.</p> |

| Symbol | Name | Meaning |
|---|--|---|
|  | <p>Anti-Lock Braking System (ABS) Warning Light</p> | <p>When the ignition switch is placed in the ON position, the ABS warning light illuminates and then turns off. This indicates the ABS is operational.</p> |
|  | <p>Anti-Lock Braking System (ABS) Warning Light</p> | <p>If the ABS warning light illuminates while the engine is running or while driving, it may indicate the ABS is not functioning properly. Have the system checked. It is recommended that you visit a dealer for this service.</p> <p>If an ABS malfunction occurs, the anti-lock function is turned off. The brake system then operates normally but without antilock assistance.</p> |
|  | <p>Electronic Parking Brake Warning Light</p> | <p>This light will illuminate after the hybrid system is started and then turns off after a few seconds.</p> <p>WARNING</p> |
|  | <p>Electronic Parking Brake Warning Light</p> | <p>If both the brake system warning light (yellow) and the brake warning light (red) illuminate when the parking brake is released and the hybrid system is on, do not drive the vehicle. More brake pedal effort than normal will be required and there will be a significant reduction in brake performance, which could result in an accident. Immediately stop the vehicle in a safe location and it is recommended you contact an INFINITI retailer.</p> <p>If the brake system warning light (yellow) illuminates when the ignition switch is in the ON position, it may indicate a malfunction in the brake system or one of the following other functions.</p> <ul style="list-style-type: none"> . Regenerative brake system . Hill start assist system . Rise-up and build-up function <p>It is recommended you see an INFINITI retailer for an inspection as soon as possible. A chime sounds if a malfunction occurs in the brake system power supply.</p> |

| | | |
|---|--|---|
|  | <p>Forward Emergency Braking (FEB) With Pedestrian Detection System Warning Light</p> | <p>This light comes on when the ignition switch is placed in the ON position. It turns off after the engine is started.</p> <p>This light illuminates when the FEB system is set to OFF on the lower display.</p> <p>If the light illuminates when the FEB system is ON, it may indicate that the system is unavailable.</p> |
|  | <p>Front Passenger Air Bag Status Light</p> | <p>The front passenger air bag status light will be lit and the passenger front air bag will be off depending on how the front passenger seat is being used.</p> |
|  | <p>Low Tire Pressure Warning Light</p> | <p>Your vehicle is equipped with a Tire Pressure Monitoring System (TPMS) that monitors the tire pressure of all tires except the spare. The low tire pressure warning light warns of low tire pressure or indicates that the TPMS is not functioning properly. After the ignition switch is placed in the ON position, this light illuminates for about 1 second and turns off.</p> <p>Low tire pressure warning</p> <p>If the vehicle is being driven with low tire pressure, the warning light will illuminate. A “Tire Pressure Low - Add Air” warning also appears in the vehicle information display. When the low tire pressure warning light illuminates, you should stop and adjust the tire pressure of all four tires to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver's door opening. The low tire pressure warning light does not automatically turn off when the tire pressure is adjusted. After the tire is inflated to the recommended pressure, the vehicle must be driven at speeds above 16 mph (25 km/h) to activate the TPMS and turn off the low tire pressure warning light. Use a tire pressure gauge to check the tire pressure. The “Tire Pressure Low - Add Air” warning appears each time the ignition switch is placed in the ON position as long as the low tire pressure warning light remains illuminated.</p> |

| | | |
|---|---|--|
| | | <p>TPMS malfunction</p> <p>If the TPMS is not functioning properly, the low tire pressure warning light will flash for approximately 1 minute when the ignition switch is placed in the ON position. The light will remain on after 1 minute. Have the system checked. It is recommended that you visit a dealer for this service. The "Tire Pressure Low — Add Air" warning does not appear if the low tire pressure warning light illuminates to indicate a TPMS malfunction.</p> |
|  | <p>Malfunction Indicator Light (MIL)</p> | <p>If this indicator light comes on steady or blinks while the engine is running, it may indicate a potential emission control malfunction.</p> <p>The MIL may also come on steady if the fuel-filler cap is loose or missing, or if the vehicle runs out of fuel. Check to make sure the fuel-filler cap is installed and closed tightly, and that the vehicle has at least 3 gallons (11.4 liters) of fuel in the fuel tank.</p> |
|  | <p>Malfunction Indicator Light (MIL)</p> | <p>After a few driving trips, the light should turn off if no other potential emission control system malfunction exists.</p> <p>If this indicator light comes on steady for 20 seconds and then blinks for 10 seconds when the engine is not running, it indicates that the vehicle is not ready for an emission control system inspection/maintenance test.</p> <p>The MIL will come on in one of two ways:</p> <ul style="list-style-type: none"> • MIL on steady — An emission control system malfunction has been detected. Check the fuel-filler cap if the Loose Fuel Cap warning appears in the vehicle information display. If the fuel-filler cap is loose or missing, tighten or install the cap and continue to drive the vehicle. The light should turn off after a few driving trips. If the light does not turn off after a few driving trips, have the vehicle inspected. It is recommended that you visit a dealer for this service. You do not need to have your vehicle towed to the dealer. • MIL blinking — An engine misfire has been detected which may damage the emission |

| | | |
|---|--|--|
| | | <p>control system. To reduce or avoid emission control system damage:</p> <ul style="list-style-type: none"> – Do not drive at speeds above 45 mph (72 km/h). – Avoid hard acceleration or deceleration. – Avoid steep uphill grades. – If possible, reduce the amount of cargo being hauled or towed. <p>The MIL may stop blinking and come on steady. Have the vehicle inspected. It is recommended that you visit a dealer for this service. You do not need to have your vehicle towed to the dealer.</p> |
|  | <p style="text-align: center;">Master Warning Light</p> | <p>When the ignition switch is in the ON position, the master warning light illuminates if any of the following are displayed on the dot matrix liquid crystal display:</p> <ul style="list-style-type: none"> . No key warning . Low fuel warning . Low washer fluid warning . Parking brake release warning . Door/lift gate open warning . Loose fuel cap warning . Check tire pressure warning |
|  | <p style="text-align: center;">Power Steering Warning Light</p> | <p>When the ignition switch is placed in the ON position, the power steering warning light illuminates. After starting the engine, the power steering warning light turns off. This indicates the power steering is operational.</p> <p>If the power steering warning light illuminates while the engine is running, it may indicate the power steering is not functioning properly and may need servicing. Have the power steering checked. It is recommended that you visit a dealer for this service.</p> <p>When the power steering warning light illuminates with the engine running, there will be no power assist for the steering, but you will still have control of the vehicle. At this time, greater</p> |

| | | |
|---|---|--|
| | | <p>steering effort is required to operate the steering wheel, especially in sharp turns and at low speeds.</p> |
|  | <p>Rear Automatic Braking (RAB) Warning Light</p> | <p>This light comes on when the ignition switch is placed in the ON position. It turns off after the engine is started.</p> <p>This light illuminates when the RAB system is turned off in the vehicle information display. If the light illuminates when the RAB system is on, it may indicate that the system is unavailable</p> |
|  | <p>Slip Indicator Light/ Vehicle Dynamic Control (VDC) Warning Light</p> | <p>This indicator light will blink when the Vehicle Dynamic Control (VDC) system is operating, thus alerting the driver to the fact that the road surface is slippery and the vehicle is nearing its traction limits. You may feel or hear the system working; this is normal.</p> <p>The light will blink for a few seconds after the VDC system stops limiting wheel spin. The indicator light also comes on when you place the ignition switch in the ON position. The light will turn off after approximately 2 seconds if the system is operational. If the light does not come on have the system checked. It is recommended that you visit a dealer for this service.</p> |
|  | <p>Vehicle Dynamic Control (VDC) OFF Indicator Light</p> | <p>This indicator light comes on when the VDC is turned off in the vehicle information display. This indicates the VDC has been turned off. Turn the VDC on using the vehicle information display, or by restarting the engine.</p> <p>The VDC light also comes on when the ignition switch is placed in the ON position. The light will turn off after a period of time if the system is operational. If the light stays on or comes on along with the indicator light while you are driving, have the VDC system checked. It is recommended that you visit a dealer for this service.</p> |

| | | |
|---|---|---|
|  | <p>All-Wheel Drive (AWD) Warning Light</p> | <p>When the ignition switch is in the “ON” position, the All-Wheel Drive (AWD) indicator light illuminates and then turns off.</p> <p>When selecting AWD mode while the engine is running, the AWD indicator light illuminates.</p> |
|  | <p>Automatic Transmission Check Warning Light</p> | <p>When the ignition switch is placed in the ON position, the light comes on for 2 seconds. If the light comes on at any other time, it may indicate the transmission is not functioning properly. It is recommended you visit a dealer to check and repair the transmission.</p> |
|  | <p>4 Wheel Active Steer (4WAS) Warning Light</p> | <p>If the light comes on while the engine is running, it may indicate that there is a malfunction with the 4 Wheel Active Steer (4WAS) portion of the steering system. Push the ignition switch to the OFF position and then to the ON position. If the light does not turn off after cycling the engine, have the system checked by an INFINITI retailer.</p> <p>If a malfunction occurs in the system, the 4 Wheel Active Steer (4WAS) function will cease but driving can be continued. However, the steering wheel is slightly turned even when driving on a straight road. Drive carefully to the nearest INFINITI retailer.</p> |
|  | <p>Distance Control Assist (DCA) System Warning Light</p> | <p>This light comes on if there is a malfunction in the Distance Control Assist (DCA) system. If the warning light illuminates, park the vehicle in a safe place. Turn the engine off, restart the engine, resume driving and turn on the DCA system again.</p> <p>If it is not possible to turn on the system or the warning light stays on, it may indicate that the system is malfunctioning. Although the vehicle is still driveable under normal conditions, have the vehicle checked at an INFINITI retailer.</p> |
|  | <p>Intelligent Cruise Control (ICC) System Warning Light</p> | <p>This light comes on if there is a malfunction in the Intelligent Cruise Control (ICC) system. If the warning light comes on, park the vehicle in a safe place. Turn the engine off, restart the</p> |

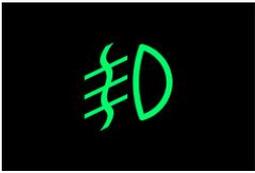
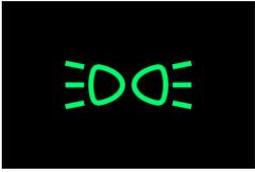
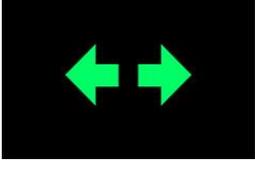
| | | |
|---|--|--|
| | | <p>engine, resume driving and set the ICC system again.</p> <p>If it is not possible to set the system or the indicator stays on, it may indicate that the system is malfunctioning. Although the vehicle is still driveable under normal conditions, have the vehicle checked at an INFINITI retailer.</p> |
|  | <p>Intelligent Key System Warning Light</p> | <p>After the ignition switch is pushed to the ON position, this light comes on for about 2 seconds and then turns off.</p> <p>This light warns of a malfunction with the Intelligent Key system.</p> <p>If the light comes on while the engine is stopped, it may be impossible to start the engine. If the light comes on while the engine is running, you can drive the vehicle. However, in these cases, contact an INFINITI retailer for repair as soon as possible.</p> |
|  | <p>Preview Function Warning Light</p> | <p>The light comes on if there is a malfunction in the Preview Braking system.</p> <p>If the warning light comes on, park the vehicle in a safe place. Turn the engine off, restart the engine, resume driving and set the ICC system again.</p> <p>If it is not possible to set the system or the indicator stays on, it may indicate that the system is malfunctioning. Although the vehicle is still driveable under normal conditions, have the vehicle checked at an INFINITI retailer.</p> |
|  | <p>Blind Spot Warning (BSW)/ Blind Spot Intervention (BSI) System Warning Light</p> | <p>If the light comes on and remains on, it may indicate that the BSW system is not functioning properly. Although the vehicle is still driveable, have the system checked by an INFINITI retailer</p> |
|  | <p>Lane Departure Warning Light</p> | <p>When the ignition switch is pushed to the ON position, the light will come on in orange, turn green, and then turn off. This indicates that the Lane Departure Warning (LDW) and Lane Departure Prevention (LDP) systems are operational.</p> |

| | | |
|---|--|---|
| | | <p>While the LDW and/or LDP system is on, the light will blink in orange and a warning chime will sound if the vehicle is traveling close to either the left or the right of a traveling lane with detectable lane markers.</p> <p>If the light comes on in orange and remains on, it may indicate that the LDW and LDP systems are not functioning properly. Have the systems checked by an INFINITI retailer.</p> |
|  | <p>Low Washer Fluid Warning Light</p> | <p>This light comes on when the washer tank fluid is at a low level. Add washer fluid as necessary.</p> |
|  | <p>Adaptive Front Lighting System (AFS) Indicator Light</p> | <p>When the ignition switch is pushed to the ON position, the Adaptive Front lighting System (AFS) indicator light will illuminate. The light will turn off in about 1 second if the AFS is operational.</p> <p>If the AFS indicator light blinks, it may indicate the AFS is not functioning properly. Have the system checked by an INFINITI retailer.</p> |
|  | <p>Front Passenger Air Bag Status Light</p> | <p>The front passenger air bag status light will be lit and the passenger front air bag will be OFF depending on how the front passenger seat is being used.</p> |
|  | <p>Intelligent Brake Assist (IBA) OFF Indicator Light</p> | <p>The light illuminates when the Intelligent Brake Assist (IBA) off switch is pushed to OFF. This indicates that the Intelligent Brake Assist (IBA) system is not operating.</p> <p>When the IBA off indicator light illuminates while the system is turned on (without the warning chime sound), this light indicates that the system control is temporarily unavailable.</p> <p>When the IBA off indicator light illuminates with the warning chime sound while the IBA system is turned on, this light indicates that the system may not be functioning properly. Park the vehicle in a safe place. Check to see if the laser sensor is</p> |

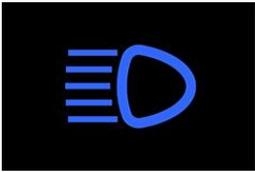
| | | |
|---|---|---|
| | | <p>clean. Turn the engine off, then restart the engine.</p> <p>If the IBA off indicator light illuminates after following the procedures above, it may indicate that the system is malfunctioning. Although the vehicle is still driveable under normal conditions, have the vehicle checked at an INFINITI retailer.</p> |
|  | <p>Rear Active Steer Warning Light</p> | <p>If the light comes on while the engine is running, it may indicate that there is a malfunction with the Rear Active Steer portion of the steering system. Have the system checked by an INFINITI retailer. If a malfunction occurs in the system, the Rear Active Steer function will cease but driving can be continued.</p> <p>If the light comes on while you are driving, contact an INFINITI retailer for repair.</p> |
|  | <p>Power Steering Warning Light</p> | <p>If the engine is not running or is turned off while driving, the power assist for the steering will not work. Steering will be harder to operate. When the power steering warning light illuminates with the engine running, there will be no power assist for the steering. You will still have control of the vehicle but the steering will be harder to operate. Have the power steering system checked by an INFINITI retailer.</p> <p>When the ignition switch is placed in the ON position, the power steering warning light illuminates. After starting the engine, the power steering warning light turns off. This indicates that the electric power steering system is operational.</p> <p>If the power steering warning light illuminates while the engine is running, it may indicate the power steering system is not functioning properly and may need servicing. Have the hydraulic pump electric power steering system checked by an INFINITI retailer.</p> <p>When the power steering warning light illuminates with the engine running, there will be no power assist for the steering but you will still have control of the vehicle. At this time, greater steering effort is required to operate the steering</p> |

| | | |
|---|--|---|
| | | wheel, especially in sharp turns and at low speeds. |
|  | Direct Response Hybrid System Warning Light | <p>When the ignition switch is in the "ON" position, the Direct Response Hybrid System warning light illuminates. After starting the hybrid system, the hybrid system warning light turns off. If the hybrid system warning light illuminates while driving, it may indicate that there is a malfunction in the electric motor and/or other hybrid system components.</p> <p>Stop your vehicle immediately and contact your INFINITI retailer.</p> <p>If the hybrid system warning light blinks while driving, it may indicate that the Li-ion battery charge is low and you cannot continue to drive. Do not allow the vehicle to coast when the Li-ion battery is low or when the hybrid system warning light blinks while driving. The engine will not automatically start to charge the Li-ion battery while the vehicle is coasting.</p> |
|  | Approaching Vehicle Sound For Pedestrians (VSP) OFF Indicator Light | This light comes on if there is a malfunction in the Approaching Vehicle Sound for Pedestrians (VSP) system. |
|  | Low Fuel Warning Light | <p>This light illuminates when the fuel in the tank is getting low. Refuel as soon as it is convenient, preferably before the fuel gauge reaches the 0 (empty) position.</p> <p>There will be a small reserve of fuel remaining in the tank when the fuel gauge reaches the 0 position.</p> |
|  | Automatic Transmission (AT) Oil Temperature Warning Light | This light illuminates when the Automatic Transmission (AT) oil temperature is too high. If the light illuminates while driving, reduce the vehicle speed as soon as safely possible until the light turns off. |

| | | |
|---|--|--|
|  | <p>Four-Wheel Drive (4WD) Warning Light</p> | <p>The warning light comes on when the ignition switch is pushed to ON. It turns off soon after the engine is started.</p> <p>If the 4WD system malfunctions, or the diameter of the front and the rear wheels are different, the warning light will either remain illuminated or blink.</p> |
|  | <p>Check Suspension Indicator Light</p> | <p>When the ignition switch is placed in the “ON” position, the light comes on for 2 seconds.</p> |
|  | <p>Snow Mode Indicator Light</p> | <p>When selecting SNOW mode while the engine is running, this light will illuminate.</p> |

| Symbol | Name | Meaning |
|---|---|--|
|  | Automatic Brake Hold Indicator Light | <p>This light illuminates to show the status of the automatic brake hold system.</p> <p>When the automatic brake hold system is on standby, the indicator will illuminate white. When the automatic brake hold system is operating, the indicator will illuminate green.</p> |
|  | Eco Drive Indicator Light | <p>When the ignition switch is pushed to the ON position, the light will come on in orange, turn green, and then turn off.</p> <p>When the drive mode select switch is turned to the ECO mode, the ECO drive indicator light will illuminate or change its color depending on the accelerator pedal operation to help assist the driver to drive economically.</p> |
|  | Front Fog Light Indicator Light | <p>The front fog light indicator light illuminates when the front fog lights are on.</p> |
|  | High Beam Assist Indicator Light | <p>This indicator light illuminates when the headlights come on while the headlight switch is in the AUTO position with the high beams selected. This indicates that the high beam assist is operational.</p> |
|  | Side Light And Headlight Indicator Light/ Exterior Light Indicator | <p>The side light and headlight indicator light illuminates when the side light or headlight position is selected.</p> |
|  | Turn Signal/ Hazard Indicator Lights | <p>The appropriate light flashes when the turn signal switch is activated. Both lights flash when the hazard switch is turned on.</p> |

| | | |
|---|--|---|
|  | <p>Low Beam Indicator Light</p> | <p>This light comes on when the switch is turned to the light position. The headlights will come on; and the front side, tail, number plate, and instrument lights remain on.</p> |
|  | <p>Lane Departure Prevention (LDP) On Indicator Light</p> | <p>The light comes on in green when the Lane Departure Prevention (LDP) system is turned on. The light turns off when the system is turned off.</p> |
|  | <p>EV Indicator Light</p> | <p>This illuminates to indicate the vehicle is being driven powered only by the motor.</p> |
|  | <p>Ready To Drive Indicator Light</p> | <p>The READY to drive indicator light illuminates when the hybrid system is powered and the vehicle may be driven.</p> |
|  | <p>Blind Spot Intervention (BSI) On Indicator</p> | <p>The light comes on in green when the Blind Spot Intervention (BSI) system is turned on. The light turns off when the system is turned off.</p> |
|  | <p>Tow Mode Indicator Light</p> | <p>This light will illuminate when the TOW MODE is selected while the engine is running.</p> |

| Symbol | Name | Meaning |
|---|--|---|
|  | High Beam Indicator | This blue light comes on when the headlight high beams are on and goes out when the low beams are selected. The high beam indicator light also comes on when the passing signal is activated. |
|  | Automatic Brake Hold Indicator Light | This light illuminates to show the status of the automatic brake hold system. When the automatic brake hold system is on standby, the indicator will illuminate white. When the automatic brake hold system is operating, the indicator will illuminate green. |
|  | Automatic Transmission Position Indicator Light | When the ignition switch is pushed to the "ON" position, the indicator shows the automatic selector position. In the manual shift mode, when the transmission does not shift to the selected gear due to a transmission protection mode, the AT position indicator light will blink and a chime will sound. |
|  | Automatic Transmission Position Indicator Light | This light illuminates to show the status of the automatic brake hold system. When the automatic brake hold system is on standby, the indicator will illuminate white. When the automatic brake hold system is operating, the indicator will illuminate green. |

Questions? Contact us.



www.obdadvisor.com
obdadvisor.scanner@gmail.com