


# LEXUS

## Warning Lights & Indicators

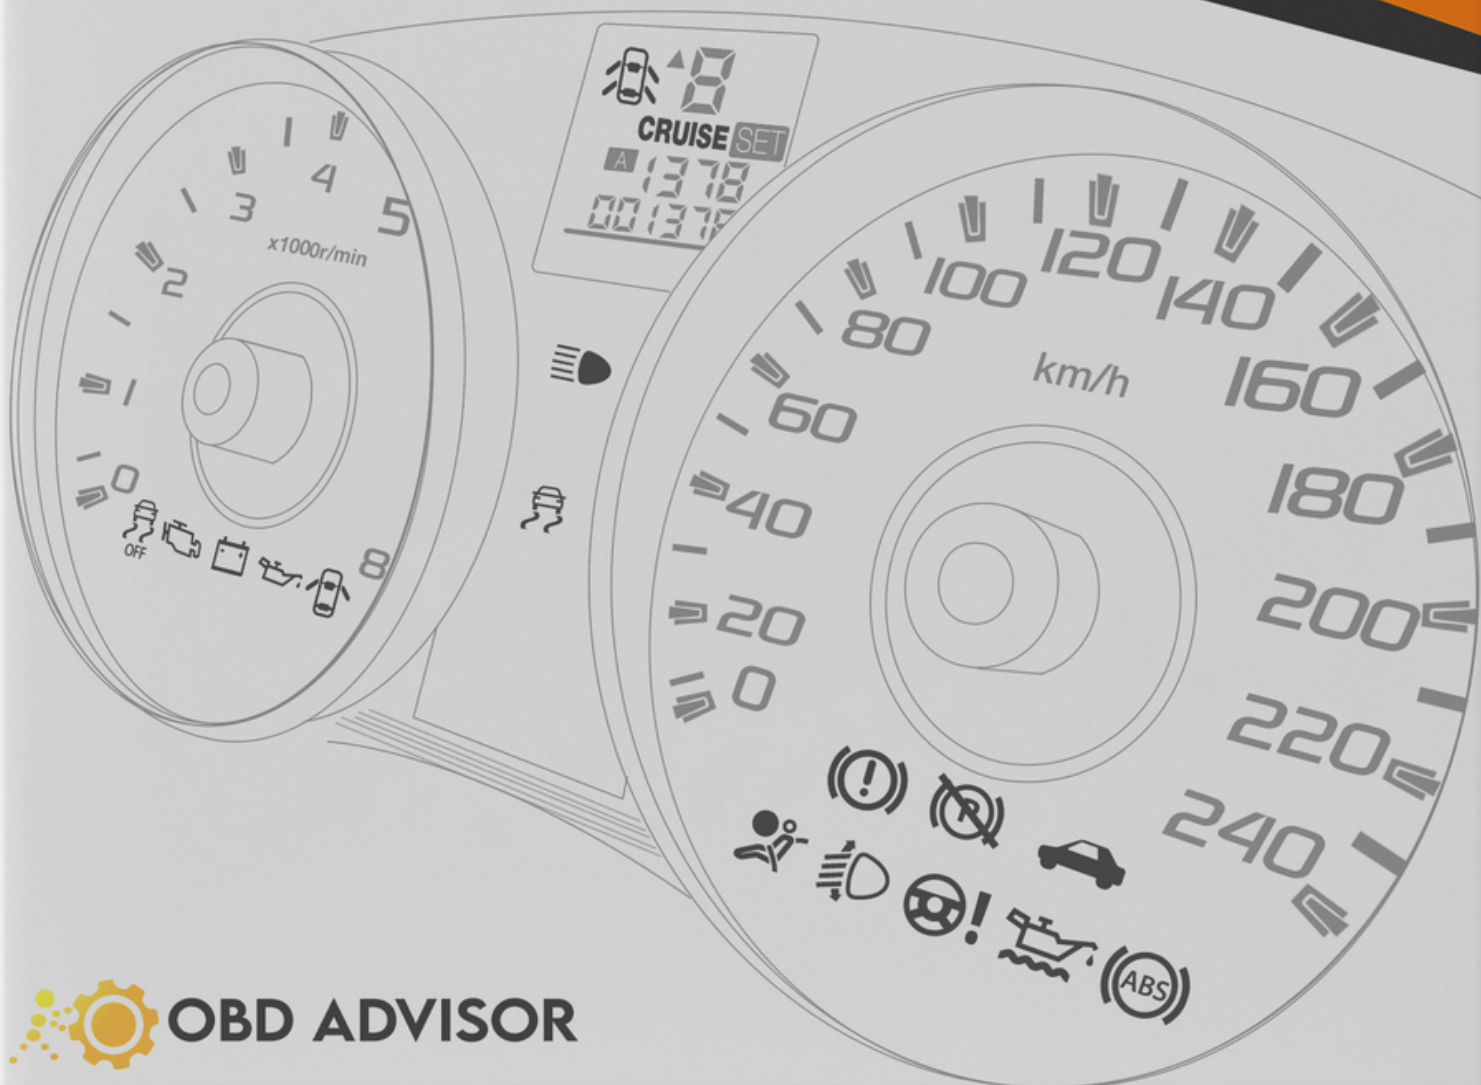

# TABLE OF CONTENTS



Red Warning Lights 3

---

Yellow Warning Lights 5


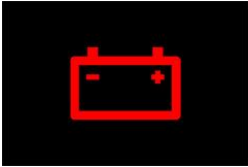





---






Green Indicators 12







---






Blue, Gray, & White Indicators 15



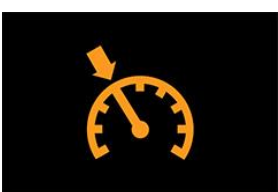

---








Symbol	Name	Meaning
	<b>Brake System Warning Light</b>	<p>Indicates that:</p> <ul style="list-style-type: none"> <li>• The brake fluid level is low; or</li> <li>• The brake system is malfunctioning</li> </ul> <p>Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.</p>
	<b>Charging System Warning Light</b>	<p>Indicates a malfunction in the vehicle's charging system.</p> <p>Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.</p>
	<b>SRS Warning Light</b>	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The SRS airbag system; or</li> <li>• The seat belt pretensioner system</li> </ul> <p>Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p>
	<b>Electric Power Steering System Warning Light</b>	<p>Indicates a malfunction in the EPS (Electric Power Steering) system.</p> <p>Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p>
	<b>Parking Brake Indicator</b>	<p>Indicates that the parking brake is engaged.</p> <p>Release the parking brake.</p>
	<b>Open Door Warning Light</b>	<p>Indicates that a door or the trunk is not fully closed.</p> <p>Check that all the doors and the trunk are closed.</p>
	<b>Seat Belt Reminder Light</b>	<p>Warns the driver and/or front passenger to fasten their seat belts</p> <p>Fasten the seat belt.</p>

		If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.
	<b>High Coolant Temperature Warning Light</b>	<p>Indicates that the engine coolant temperature is too high</p> <p>Immediately stop the vehicle in a safe place. Handling method:</p> <ol style="list-style-type: none"> <li>1. Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the hybrid system.</li> <li>2. If you see steam: Carefully lift the hood after the steam subsides. If you do not see steam: Carefully lift the hood.</li> <li>3. After the hybrid system has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.</li> </ol>
	<b>Low Engine Oil Pressure Warning Light</b>	<p>Indicates that the engine oil pressure is too low</p> <p>Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.</p>
	<b>Rear Passengers' Seat Belt Reminder Light</b>	<p>Warns the rear passengers to fasten their seat belts.</p> <p>Fasten the seat belt.</p>
		
	<b>Security Indicator</b>	<p>The indicator light flashes after the power switch has been turned off to indicate that the system is operating.</p> <p>The indicator light stops flashing after the power switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.</p>






Symbol	Name	Meaning
	<b>Lane Tracing Assist Indicator</b>	Indicates a malfunction in the LTA (Lane Tracing Assist). Follow the instructions displayed on the multi-information display. <ul style="list-style-type: none"> <li>• “LTA Malfunction Visit Your Dealer”</li> </ul>
		The system may not be operating properly. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. <ul style="list-style-type: none"> <li>• “LTA Unavailable”</li> </ul> The system is temporarily canceled due to a malfunction in a sensor other than the front camera. Turn the LTA system off, wait for a little while, and then turn the LTA system back on. <ul style="list-style-type: none"> <li>• “LTA Unavailable at Current Speed”</li> </ul> The function cannot be used as the vehicle speed exceeds the LTA operation range. Drive slower.
	<b>Lane Departure Alert Indicator</b>	Indicates a malfunction in the LDA (Lane Departure Alert). Follow the instructions displayed on the multi-information display.
	<b>Dynamic Radar Cruise Control Indicator</b>	Indicates a malfunction in the dynamic radar cruise control. Follow the instructions displayed on the multi-information display.
	<b>Cruise Control Indicator</b>	Indicates a malfunction in the cruise control. Follow the instructions displayed on the multi-information display.
	<b>Speed Limiter Indicator</b>	Indicates a malfunction in the speed limiter. Follow the instructions displayed on the multi-information display.





	<p><b>Proactive Driving Assist Indicator</b></p>	<p>Indicates a malfunction in the PDA (Proactive Driving Assist).</p> <p>Follow the instructions displayed on the multi-information display.</p>
	<p><b>Pop Up Hood Warning Light</b></p>	<p>Indicates that the Pop Up Hood system has operated. The Pop Up Hood system cannot be reused once it has operated. Have it replaced by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.</p> <p>Indicates a malfunction in the Pop Up Hood system. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p>
	<p><b>Malfunction Indicator Lamp</b></p>	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The emission control system (if equipped);</li> <li>• The electronic engine control system;</li> <li>• The electronic throttle control system; or</li> <li>• The electronic automatic transmission control system</li> </ul> <p>Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p>
	<p><b>ABS Warning Light</b></p>	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The ABS; or</li> <li>• The brake assist system</li> </ul> <p>Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p>
	<p><b>Pre-Crash Safety Warning Light</b></p>	<p>Indicates a malfunction in the PCS (Pre-Crash Safety system) or that the system is temporarily unavailable due to the vehicle being extremely hot/cold, or dirt around a front sensor, etc.</p> <p>Follow the instructions displayed on the multi-information display.</p> <p>If the PCS (Pre-Crash Safety system) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate.</p>


	<p><b>Slip Indicator</b></p>	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The VSC system;</li> <li>• The TRC system; or</li> <li>• The hill-start assist control system</li> </ul> <p>Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p> <p>The light will flash when the VSC, TRC or ABS system is operating.</p>
	<p><b>Tire Pressure Warning Light</b></p>	<p>When the light comes on:</p> <p>Low tire inflation pressure such as</p> <ul style="list-style-type: none"> <li>• Natural causes</li> <li>• Flat tire</li> </ul> <p>Adjust the tire inflation pressure (including the full-size spare tire) to the specified level.</p> <p>The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.</p> <p>When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system. Have the system checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.</p>
	<p><b>Adaptive Front-lighting System OFF Indicator</b></p>	<p>Indicates a malfunction in the adaptive front-lighting system</p> <p>Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p>
	<p><b>Brake Hold Operated Indicator</b></p>	<p>Indicates a malfunction in the brake hold system</p> <p>Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately</p>








	<b>Brake System Warning Light</b>	Indicates a malfunction in the parking brake system. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately
	<b>Low Fuel Level Warning Light</b>	Indicates remaining fuel is approximately 9.9 L (2.6 gal., 2.2 Imp.gal.) or less. Refuel the vehicle.
	<b>Master Warning Light</b>	A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
	<b>Lane Keeping Assist Warning Light</b>	The warning light comes on and a warning message is displayed to indicate that the LKA (Lane-Keeping Assist) system is not available temporarily or has detected a malfunction. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
	<b>Rear Fog Light Indicator</b>	Turns the rear fog light on.
	<b>Traction Control OFF Indicator</b>	If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the engine to the wheels. Pressing "TRC OFF" to turn the system off may make it easier for rock the vehicle in order to free it.
	<b>BSM Outside Rear View Mirror Indicator</b>	When a vehicle or bicycle which may collide with a door (other than the back door) when opened is detected, the outside rear view mirror indicator on the detected side will illuminate. If the door on the detected side is open, or opening of the door is canceled, the outside rear view mirror indicator will blink.












	<p><b>Snow Mode Indicator</b></p>	<p>Snow mode can be selected to suit the conditions when driving on slippery road surfaces, such as on snow.</p>
	<p><b>PASSENGER AIR BAG Indicator</b></p>	<p>This indicator light turns on when the airbag system is on (only when the engine switch is in IGNITION ON mode).</p>
	<p><b>Inappropriate Pedal Operation Warning Light</b></p>	<p>When a buzzer sounds:</p> <ul style="list-style-type: none"> <li>• Brake Override System is malfunctioning</li> <li>• Drive-Start Control is malfunctioning</li> <li>• Drive-Start Control is operating</li> <li>• PKSB (Parking Support Brake) (if equipped) is operating</li> </ul> <p>Follow the instructions displayed on the multi-information display.</p> <p>When a buzzer does not sound: Brake Override System is operating.</p> <p>-&gt; Release the accelerator pedal and depress the brake pedal.</p>
	<p><b>Electric Power Steering System Warning Light</b></p>	<p>Indicates a malfunction in the EPS (Electric Power Steering) system.</p> <p>Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p>
	<p><b>Hybrid System Overheat Warning Light</b></p>	<p>Indicates the hybrid system has overheated</p> <p>Stop the vehicle in a safe place.</p> <p>Handling method:</p> <ol style="list-style-type: none"> <li>1 Stop the vehicle in a safe place.</li> <li>2 Stop the hybrid system and carefully lift the hood.</li> <li>3 After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.</li> </ol>


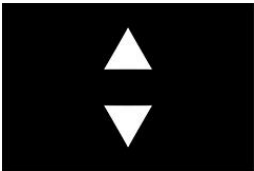



	<p><b>Rear Crossing Traffic Alert OFF Indicator</b></p>	<p>When a buzzer sounds: Indicates a malfunction in the RCTA (Rear Crossing Traffic Alert) function Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p> <p>When a buzzer does not sound: Indicates that the rear bumper around the radar sensor is covered with dirt, etc. Follow the instructions displayed on the multi-information display.</p>
	<p><b>Rear Camera Detection OFF Indicator</b></p>	<p>Indicates a RCD (Rear Camera Detection) function is malfunctioning or disabled. Follow the instructions displayed on the multi-information display.</p>
	<p><b>Parking Support Brake OFF Indicator</b></p>	<p>When a buzzer sounds: Indicates a malfunction in the PKSB (Parking Support Brake) system. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.</p> <p>When a buzzer does not sound: Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc. Follow the instructions displayed on the multi-information display.</p>
	<p><b>BSM Digital Side-view Monitor Indicator</b></p>	<p>When a vehicle is detected in a blind spot of the Digital Side-view Monitor cameras or approaching rapidly from behind into a blind spot, the Digital Side-view Monitor indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the Digital Side-view Monitor indicator will flash.</p>







	<b>Smart Entry &amp; Start System Indicator</b>	When starting the hybrid system, Smart entry & start system indicator and a message will be displayed on the multi-information display. If it is not displayed, the hybrid system cannot be started.
---	---	---

Symbol	Name	Meaning
	<b>Turn Signal Indicator</b>	<p>Turn signals can be operated when The engine switch is in IGNITION ON mode.</p> <p>If the indicator flashes faster than usual Check that a light bulb in the front or rear turn signal lights has not burned out.</p> <p>If the turn signals stop flashing before a lane change has been performed. Operate the lever again.</p>
	<b>Tail Light Indicator</b>	The front position, tail, license plate and instrument panel lights turn on.
	<b>Automatic High Beam Indicator</b>	The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.
		The Adaptive High-beam System indicator will come on when the headlights are turned on automatically to indicate that the system is active.
	<b>Front Fog Light Indicator</b>	Turns the front fog lights on.
	<b>Cruise Control Indicator</b>	<p>Press the driving assist mode select switch to select cruise control.</p> <p>The cruise control indicator will illuminate.</p>
	<b>Dynamic Radar Cruise Control Indicator</b>	<p>Press the driving assist mode select switch to select dynamic radar cruise control.</p> <p>The dynamic radar cruise control indicator will illuminate.</p>

	<p><b>Cruise Control “SET” Indicator</b></p>	<p>Press the driving assist mode select switch to select Cruise control “SET”. The Cruise control “SET” indicator will illuminate.</p>
	<p><b>LKA Indicator</b></p>	<p>Press the LKA switch to turn the LKA system on. The LKA indicator illuminates and a message is displayed on the multi-information display. Press the LKA switch again to turn the LKA system off. When the LKA system is turned on or off, operation of the LKA system continues in the same condition the next time the engine is started.</p>
	<p><b>Parking Assist-sensor OFF Indicator</b></p>	<p>Indicates a malfunction in the Lexus parking assist-sensor function. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately. Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc. Follow the instructions displayed on the multi-information display: - Remove the water drops, ice, snow, dirt, etc., from the sensor to return the system to normal. - If a sensor is dirty, the position of the dirty sensor will be shown on the display. - Also, due to ice forming on a sensor at low temperatures, a warning message may be displayed or the sensor may not be able to detect an object. Once the ice melts, the system will return to normal. If a warning message is displayed even if the sensor is clean, there may be a sensor malfunction. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.</p>
	<p><b>Blind Spot Monitor Indicator</b></p>	<p>The Blind Spot Monitor function and Rear Crossing Traffic Alert function can be switched on and off using the multi-information display. When switched on, the BSM indicator illuminates on the meter and the buzzer sounds.</p>

	<p><b>Brake Hold Standby Indicator</b></p>	<p>Turns the brake hold system on, the brake hold standby indicator comes on.</p>
	<p><b>Eco Driving Indicator Light</b></p>	<p>During Eco-friendly acceleration (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds the Zone of Eco driving, or when the vehicle is stopped, the light turns off.</p>
	<p><b>Eco Drive Mode Indicator</b></p>	<p>Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.</p>
		<p>When not in Eco drive mode and the driving mode select switch is turned to the left, the “ECO” indicator comes on in the multi-information display.</p> <p>Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.</p> <p>When not in Eco drive mode and the driving mode select switch is turned to the left, the “ECO” indicator comes on in the multi-information display.</p>
	<p><b>Multi Weather Lights Indicator</b></p>	<p>The Multi Weather Lights is a system that illuminates the cornering lights to ensure visibility when driving in inclement weather, such as rain or fog.</p> <p>When the Multi Weather Lights system is enabled, the Multi Weather Lights indicator on the meter will illuminate.</p>

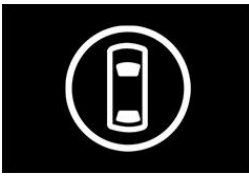Symbol	Name	Meaning
	<b>Headlight High Beam Indicator</b>	<p>With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.</p> <p>Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.</p>
	<b>Gear Shift Indicator</b>	The Gear Shift Indicator display is a guide to help the driver achieve improved fuel economy and reduced exhaust emissions within limits of engine performance.
	<b>SPORT Indicator</b>	<p>Assists acceleration response by controlling the transmission, engine and steering. Suitable for when precise handling is desirable, for example when driving on mountain roads.</p> <p>When not in Sport mode and the driving mode select switch is turned to the right, the "SPORT" indicator comes on in the multi-information display.</p>
	<b>SPORT S Indicator</b>	<p>Assists acceleration response by controlling the transmission, engine and steering. Suitable for when precise handling is desirable, for example when driving on mountain roads.</p> <p>When not in Sport mode and the driving mode select switch is turned to the right, the "SPORT" indicator comes on in the multi-information display.</p>
	<b>SPORT S+ Indicator</b>	<p>Assists acceleration response by controlling the transmission, engine and steering. Suitable for when precise handling is desirable, for example when driving on mountain roads.</p> <p>When not in Sport mode and the driving mode select switch is turned to the right, the "SPORT" indicator comes on in the multi-information display.</p>

	<p><b>CUSTOMIZE Indicator</b></p>	<p>The customized mode is selected by pressing the driving mode select switch. Each time the switch is pressed, the driving mode changes between normal mode and customized mode. When customized mode is selected, the “Customize” indicator will be illuminated.</p>
	<p><b>Low Outside Temperature Indicator</b></p>	<p>When the outside temperature is approximately 3°C (37°F) or lower, this indicator will flash for approximately 10 seconds, then stay on.</p>
	<p><b>Driving Assist Information Indicator</b></p>	<p>Illuminates when the safe exit assist is turned off. At this time, “Safe Exit Assist OFF” will be displayed on the multi-information display.</p>
	<p><b>Stop Light Indicator</b></p>	<p>This light comes on when the stop lights are illuminated by the operation of the brake pedal or the driving assist system.</p>
	<p><b>Trail Mode Indicator</b></p>	<p>Press the Trail Mode switch, to turn the Trail Mode on. The Trail Mode indicator light will come on the multi-information display.</p>
	<p><b>Auto Glide Control Indicator</b></p>	<p>When Auto Glide Control operates, the AGC indicator light will illuminate.</p>



# Questions? Contact us.



[www.obdadvisor.com](http://www.obdadvisor.com)  
[obdadvisor.scanner@gmail.com](mailto:obdadvisor.scanner@gmail.com)