

Warning Lights & Indicators



TABLE OF CONTENTS












Red Warning Lights	3
--------------------	---







Yellow Warning Lights	7
-----------------------	---


Green Indicators	13
------------------	----



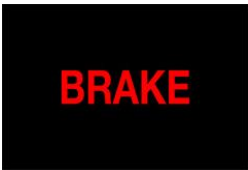

Blue, Gray, & White Indicators	14
--------------------------------	----






Symbol	Name	Meaning
	Restraint System Warning Lamp	<p>The restraint system red warning lamp is lit while the vehicle is on. The restraint system is malfunctioning.</p> <ul style="list-style-type: none"> - Drive on carefully. - Note the messages on the instrument display. - Visit a qualified specialist workshop immediately.
	Seat Belt Warning Lamp	<p>The red seat belt warning lamp flashes and an intermittent warning tone sounds. The driver or front passenger has not fastened his/her seat belt while the vehicle is in motion. Fasten your seat belt. There are objects on the front passenger seat. Remove the objects from the front passenger seat.</p> <p>The red seat belt warning lamp lights up for six seconds once the vehicle has started. In addition, an intermittent warning tone may sound. The red seat belt warning lamp reminds the driver and front passenger to fasten their seat belts. Fasten your seat belt. If you have placed objects on the front passenger seat, the red seat belt warning lamp may remain lit.</p>
	Power Steering Warning Lamp	<p>The red power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning. Note the messages on the instrument display.</p>
	Rear Axle Steering Warning Lamp	<p>The red rear axle steering warning lamp is lit while the vehicle is running. The rear axle steering is malfunctioning. Note the messages on the driver's display</p>
	Coolant Warning Lamp	<p>The red coolant warning lamp is lit while the engine is running. Possible causes:</p> <ul style="list-style-type: none"> - The temperature sensor is malfunctioning - The coolant level is too low - The air supply to the radiator is obstructed - The radiator fan is faulty - The engine coolant pump is faulty





		<p>If there is an additional warning tone, the coolant temperature has exceeded the maximum permissible temperature. Stop immediately in accordance with the traffic conditions and switch off the vehicle. Do not continue driving. Note the messages on the instrument display.</p> <p>If the coolant temperature display is at the lower end of the temperature scale: Consult a qualified specialist workshop.</p> <p>If the coolant temperature display is at the upper end of the temperature scale:</p> <ul style="list-style-type: none"> - Exit the vehicle and keep a safe distance from it until the engine has cooled down. - Check the coolant level. - Make sure that the air supply to the radiator is not obstructed. - Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below the red area.
	Electrical Malfunction Warning Lamp	The red electrical malfunction warning lamp is lit. There is a malfunction in the electrics. Note the messages on the instrument display.
	Electric Parking Brake Indicator Lamp	The red electric parking brake indicator lamp flashes or is lit. Note the messages on the instrument display.
	Electric Parking Brake Indicator Lamp	
	Brakes Warning Lamp	The red brake warning lamp is lit while the vehicle is running. Possible causes:






	Brakes Warning Lamp	<ul style="list-style-type: none"> - The brake force boosting is malfunctioning and the braking characteristics may be affected. - There is insufficient brake fluid in the brake fluid reservoir. <p>Note the messages on the instrument display.</p>
	Distance Warning Function Warning Lamp	<p>The red distance warning lamp lights up while the vehicle is in motion. The distance to the vehicle in front is too small for the speed selected.</p> <p>If there is an additional warning tone, you are approaching an obstacle at too high a speed.</p> <ul style="list-style-type: none"> - Be prepared to brake immediately. - Increase the distance.
	System Malfunction Warning Lamp	<p>The red system error warning lamp is lit while the vehicle is in a state of operational readiness "READY". There is a malfunction in the drive system. Note the messages on the driver's display.</p>
	Suspension Warning Lamp	<p>The red AIRMATIC/E-ACTIVE BODY CONTROL warning lamp is lit. A malfunction has occurred in AIRMATIC/E-ACTIVE BODY CONTROL.</p> <ul style="list-style-type: none"> - Note the messages on the driver's display. - Consult a qualified specialist workshop.
	Hood Open Warning Lamp	<p>The hood is open. A warning tone also sounds.</p> <p>WARNING:</p> <p>The open hood may block your view when the vehicle is in motion. There is a risk of an accident.</p> <ul style="list-style-type: none"> - Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. - Secure the vehicle against rolling away. - Close the hood.
	Door Open Warning Lamp	<p>At least one door is open. A warning tone also sounds. Close all the doors.</p>








	Trailer Tow Hitch Warning Lamp	<p>The red trailer hitch warning lamp is lit. The trailer hitch is not operational. Note the messages on the instrument display.</p> <p>WARNING: Risk of an accident if the ball neck is not locked</p> <p>The trailer may become detached.</p> <ul style="list-style-type: none">- Stop the vehicle immediately. Do not continue driving.- Uncouple the trailer and secure it against rolling away.- Initiate a new swiveling procedure and do not re-couple the trailer until the display message disappears.
---	---------------------------------------	--


Symbol	Name	Meaning
	Coolant Warning Lamp	<p>The yellow coolant warning lamp is lit while the engine is running. Possible causes:</p> <ul style="list-style-type: none"> - The temperature sensor is malfunctioning - The charge air, transmission oil, or battery cooling is faulty - The radiator shutters are blocked or defective <p>Avoiding high loads on the engine, drive to the nearest qualified specialist workshop.</p>
	Engine Diagnosis Warning Lamp	<p>The yellow Check Engine warning lamp is lit while the engine is running. A malfunction has occurred in the engine, the exhaust system or the fuel system. The emissions limit value may have been exceeded and the engine may be running in emergency operation mode.</p> <p>In some states, legal requirements stipulate that you must immediately consult a qualified specialist workshop as soon as the yellow Check Engine warning lamp lights up. Have the vehicle checked as soon as possible at a qualified specialist workshop.</p>
	Fuel Reserve Warning Lamp	<p>The yellow fuel reserve warning lamp lights up while you are driving. There has been pressure loss in the fuel system. The fuel filler cap is not closed correctly or the fuel system is leaking. Close the fuel filler cap.</p> <p>If the fuel filler cap has already been closed correctly: Consult a qualified specialist workshop.</p> <p>The yellow fuel reserve warning lamp lights up while the engine is running. The fuel supply has dropped into the reserve range. Refuel.</p>
	Electric Parking Brake Indicator Lamp	<p>The yellow electric parking brake indicator lamp is also lit in the event of a malfunction. Note the messages on the instrument display.</p>





	Recuperative Brake System Warning Lamp	<p>The yellow Recuperative Brake System warning lamp is lit while the vehicle is running.</p> <ul style="list-style-type: none"> - Adjust your speed and drive on carefully, leaving a suitable distance to the vehicle in front. - If the instrument display shows a display message, observe it. - Consult a qualified specialist workshop.
	Brakes Warning Lamp	<p>The yellow Brakes warning lamp is lit while the vehicle is running.</p> <ul style="list-style-type: none"> - Adjust your speed and drive on carefully, leaving a suitable distance to the vehicle in front. - If the instrument display shows a display message, observe it. - Consult a qualified specialist workshop.
	Suspension Warning Lamp	<p>The yellow AIR BODY CONTROL warning lamp is lit. A malfunction has occurred in the AIR BODY CONTROL.</p> <p>The yellow DYNAMIC BODY CONTROL warning lamp is lit. A malfunction has occurred in the DYNAMIC BODY CONTROL.</p> <p>Note the messages on the instrument display.</p>
	ABS Warning Lamp	<p>The yellow ABS warning lamp is lit while the vehicle is running. ABS is malfunctioning. If an additional warning tone sounds, EBD is malfunctioning.</p> <p>Other driving systems and driving safety systems may also be malfunctioning.</p> <p>Note the messages on the instrument display.</p>
	ESP Warning Lamp	<p>The yellow ESP warning lamp flashes while the vehicle is in motion. One or more wheels have reached their grip limit. Adapt your driving style to suit the road and weather conditions.</p> <p>The yellow ESP warning lamp is lit while the vehicle is running. ESP is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning.</p> <p>Note the messages on the instrument display.</p>








	ESP OFF Warning Lamp	The yellow ESP OFF warning lamp is lit while the vehicle is running. ESP is deactivated. Other driving systems and driving safety systems may also be inoperative.
	ESP OFF Warning Lamp	Observe the notes on deactivating ESP.
	BAS ESP Warning Lamp	<p>The malfunction indicator lamp for the ESP is combined with the BAS indicator. The yellow "ESP/BAS Warning Lamp" in the instrument cluster comes on when the ignition switch is turned to the "ON" position. It should go out with the engine running.</p> <p>If the "ESP/BAS Warning Lamp" comes on continuously with the engine running, a malfunction has been detected in either the ESP or the BAS system, or both. If this light remains on after several ignition cycles, and the vehicle has been driven several miles at speeds greater than 30mph (48 km/h), see your authorized dealer as soon as possible to have the problem diagnosed and corrected.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • The ESP/BAS Warning Lamp comes on momentarily each time the ignition switch is turned ON. • Each time the ignition is turned ON, the ESP System will be ON even if it was turned off previously. • The ESP Control System will make buzzing or clicking sounds when it is active. This is normal; the sounds will stop when ESP becomes inactive following the maneuver that caused the ESP activation.
	Tire Pressure Monitoring System Warning Lamp	The yellow tire pressure monitor warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit.





		<p>The tire pressure monitoring system is malfunctioning.</p> <p>The yellow tire pressure monitoring system warning lamp (pressure loss/malfunction) is lit. The tire pressure monitoring system has detected tire pressure loss in at least one of the tires.</p> <ul style="list-style-type: none"> - Stop the vehicle in accordance with the traffic conditions. - Check the tire pressure and the tires.
	Rear Fog Light	Rear fog light has failed. Have the lights checked as soon as possible.
	Preglow Indicator Lamp	<p>To start a diesel engine: turn the the Smart Key to position 2 in the ignition lock. The preglow indicator lamp in the instrument cluster lights up.</p> <p>When the preglow indicator lamp goes out, turn the Smart Key to position 3 and release it as soon as the engine is running.</p>
	Reduced Power Warning Lamp	The yellow reduced-power warning lamp is on. Drive system power output is reduced. Note the messages on the driver's display.
	Attention Assist Warning Lamp	<p>ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver. If necessary, take a break.</p> <p>ATTENTION ASSIST is malfunctioning. Consult a qualified specialist workshop.</p>
	Attention Assist Warning Lamp	<p>ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver. If necessary, take a break.</p> <p>ATTENTION ASSIST is malfunctioning. Consult a qualified specialist workshop.</p>

	Power Steering Warning Lamp	The yellow power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning. Note the messages on the instrument display.
	Rear Axle Steering Warning Lamp	The yellow rear axle steering warning lamp is lit while the vehicle is running. The rear axle steering is malfunctioning. Note the messages on the driver's display.
	Drift Mode Warning Lamp	DRIFT MODE is activated while the engine is running. Observe the notes on activating DRIFT MODE
	Occupant Presence Reminder Warning Lamp	The yellow occupant presence reminder warning lamp is lit. The occupant presence reminder is malfunctioning. Note the messages on the driver's display.
	Washer Fluid Warning Lamp	The washer fluid level in the washer fluid reservoir has dropped below the minimum. Add washer fluid
	Brake Pad Wear Warning Lamp	The brake pads/linings have reached their wear limit. Visit a qualified specialist workshop.
	Low Coolant Warning Lamp	<p>The coolant level is too low. Avoid making long journeys with too little coolant in the engine cooling system. The engine will otherwise be damaged.</p> <ul style="list-style-type: none"> - Add coolant, observing the warning notes before doing so. - If coolant needs to be added more often than usual, have the engine coolant system checked at a qualified specialist workshop.

	<p>Sport Handling Mode Warning Light</p>	<p>The yellow SPORT handling mode warning lamp is lit while the engine is running. SPORT handling mode is activated.</p> <p>WARNING</p> <p>When SPORT handling mode is switched on, ESP is unable to stabilize the vehicle. There is an increased risk of skidding and an accident. Only switch to SPORT handling mode in the following situations:</p> <ul style="list-style-type: none">- When using snow chains- In deep snow- On sand or gravel- On designated roads when the vehicle's own oversteering and under steering characteristics are desired.
---	---	--

Symbol	Name	Meaning
	Turn Signal Lights	It flashes when you switch the turn signal lamps on.
	Low Beam	It illuminates when you switch the low-beam lamps on.
	Standing Lights	It illuminates when you switch the standing lights on.
	Blind Spot Assist	Blind Spot Assist or Active Blind Spot Assist is active.

Symbol	Name	Meaning
	High Beam Indicator	High beams are switched on.
	Blind Spot Assist	Blind Spot Assist or Active Blind Spot Assist is enabled.
	Active Brake Assist Warning Lamp	The Active Brake Assist warning lamp is on. Due to dirty sensors or a malfunction, the system is not available or the range of functions is restricted. Note the messages on the instrument display.
	Active Brake Assist Warning Lamp	The Active Brake Assist warning lamp is on. The system is switched off or the range of functions has been automatically restricted. This may be the case if another driving system has been activated. Observe the notes on Active Brake Assist
	Active Brake Assist Warning Lamp	The Active Brake Assist warning lamp is on. After you drive off, the system's range of functions will be restricted due to the teach-in process. Depending on the ambient conditions, the teach-in process may take a few minutes. Observe the notes on Active Brake Assist
	Mercedes-Benz Emergency Call System Warning Lamp	The Mercedes-Benz emergency call system is malfunctioning. The Mercedes me connect system is also malfunctioning. Consult a qualified specialist workshop.
	Adaptive High-beam Assist	If Adaptive High-beam Assist is activated, the indicator lamp will light up on the driver's display.

	Occupant Presence Reminder Warning Lamp	<p>The white occupant presence reminder warning lamp is lit. The occupant presence reminder is deactivated. Switch on the occupant presence reminder.</p>
	Traffic Sign Assist Warning Lamp	<p>The Traffic Sign Assist warning lamp is lit. Traffic Sign Assist is malfunctioning. Note the messages on the driver's display.</p>
	Rear Seat Backrest Not Latched	<p>Sedan with through-loading feature in the rear bench seat: The backrest in the rear is not engaged on the left-hand and/or right-hand side. A warning tone also sounds. Push the backrest back until it engages.</p>
	Active Steering Assist	<p>Active Steering Assist has reached the system limits. You have not steered independently for a considerable period of time. Take over the steering and drive on in accordance with the traffic conditions.</p>

Questions? Contact us.



www.obdadvisor.com
obdadvisor.scanner@gmail.com