



# TABLE OF CONTENTS



Red Warning Lights 3

---

Yellow Warning Lights 6

---

Green Indicators 12

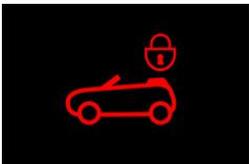
---

Blue, Gray, & White Indicators 14

---

Symbol	Name	Meaning
	<b>Safety Belt Reminder</b>	Indicator light flashes or is illuminated: safety belt on the driver or passenger side is not buckled.  The safety belt reminder can also be activated if objects are placed on the front passenger seat. Make sure that the safety belts are positioned correctly.
	<b>Airbag System Warning Light</b>	Airbag system and belt tensioner are not working.  Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.
	<b>Parking Brake System Warning Light</b>	The parking brake is set while driving. Release the parking brake.
	<b>Brake System Warning Light</b>	Braking system impaired. Continue to drive moderately.
	<b>Brake System Warning Light</b>	Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.
	<b>Approach Control Warning</b>	Indicator light illuminates: advance warning is issued, for example when there is the impending danger of a collision or the distance to the vehicle ahead is too small. Increase distance.  Indicator light flashes: acute warning of the imminent danger of a collision when the vehicle approaches another vehicle at a relatively high differential speed. Intervention by braking or make an evasive maneuver.
	<b>Pedestrian Warning</b>	If a collision with a person detected in this way is imminent, the symbol lights up and a signal sounds.

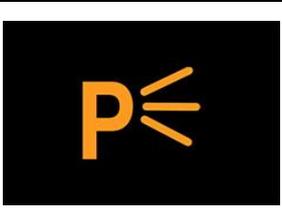
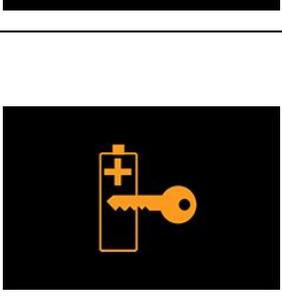
	<b>Car On Lift Warning Light</b>	<p>The starter has failed or Ignition malfunctioning. The engine can only be restarted when the brake is depressed or Lighting system failed. Low beams/tail lights and brake lights still operational. All other lights failed. Have the system in question checked immediately.</p> <p>The engine cannot be restarted. Depress the brake to restart the engine.</p>
	<b>Door Ajar Indicator</b>	A door is open.
	<b>Hood Open Indicator</b>	The hood is open.
	<b>Tailgate Open Indicator</b>	The tailgate is open.
	<b>Service Requirement Warning Light</b>	Service is due. Arrange a service appointment.
	<b>Service Requirement Warning Light</b>	Service is due. Arrange a service appointment.
	<b>Engine Temperature Warning Light</b>	<p>The engine is overheating. Carefully bring the car to a stop, switch off the engine and allow it to cool down.</p> <p>Do not open the hood; otherwise, there would be a risk of injury due to scalding. Contact your service center.</p>
	<b>Transmission Warning Light</b>	Transmission limp-home program active with restricted range of gears, possibly with reduced acceleration. You can continue your journey, but moderate your speed and

		<p>exercise due caution. Have the system checked immediately.</p> <p>Gears can be engaged without depressing the brake. Always depress the brake to engage a gear.</p> <p>Automatic selector lever locked: Manually unlock the selector lever lock.</p>
	<b>Transmission Oil Temperature Light</b>	<p>The transmission is overheating. Bring the car to a stop and move the selector lever to position P. Allow the transmission to cool down.</p> <p>You can continue your journey, but moderate your speed and exercise due caution. Have the system checked if the situation reoccurs.</p>
	<b>Convertible Top Locked Indicator</b>	<p>The convertible top is not locked. The convertible top is not locked. Fully open or close the convertible top before continuing to drive.</p>
	<b>Convertible Top Control Failed Indicator</b>	<p>Convertible top control failed! The convertible top position and lock cannot be detected.</p> <p>When the convertible top has been securely locked, you can continue driving. Close the convertible top/sliding sunroof manually. Have the system checked by the service center.</p>

Symbol	Name	Meaning
	<b>Active Cruise Control</b>	The number bars show the selected distance from the vehicle driving ahead.
	<b>Vehicle Detection, Active Cruise Control</b>	Indicator lamp illuminates: a vehicle has been detected ahead of you. Indicator lamp flashes: the conditions are not adequate for the system to work. The system was deactivated but applies the brakes until you actively resume control by pressing on the brake pedal or accelerator pedal.
	<b>Cruise Control System Failed Indicator</b>	The cruise control system has failed. Have the system checked.
	<b>Park Distance Control Failed Indicator</b>	The Park Distance Control has failed. Have the system checked.
	<b>Anti-lock Braking System Warning Light</b>	Braking force boost may not be working. Avoid abrupt braking. Take the longer braking distance into account.
	<b>Anti-lock Braking System Warning Light</b>	Have the system immediately checked by a dealer's service center or another qualified service center or repair shop.
	<b>Dynamic Stability Control Indicator</b>	The indicator light flashes: DSC controls the drive and braking forces. The vehicle is stabilized. Reduce speed and modify your driving style to the driving circumstances. The indicator light lights up: DSC has malfunctioned. Have the system checked by a

		dealer's service center or another qualified service center or repair shop.
	<b>Dynamic Stability Control OFF Indicator</b>	Dynamic Stability Control is deactivated or Dynamic Traction Control is activated.
	<b>Flat Tire Monitor Light</b>	The Flat Tire Monitor signals a loss of tire inflation pressure in a tire. Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
	<b>Tire Pressure Monitor System Light</b>	<p>The indicator light illuminates. The Tire Pressure Monitor reports a low tire inflation pressure or a flat tire. Observe the information in the Check Control message.</p> <p>The indicator light flashes and then illuminates continuously. No flat tire or loss of tire inflation pressure can be detected.</p> <ul style="list-style-type: none"> <li>- Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again.</li> <li>- TPM was unable to complete the reset. Reset the system again.</li> <li>- A wheel without TPM electronics is mounted: have it checked by a dealer's service center or another qualified service center or repair shop as needed.</li> <li>- Malfunction: have the system checked by a dealer's service center or another qualified service center or repair shop.</li> </ul>
	<b>Steering System Light</b>	<p>Steering system in some cases not working. Have the steering system checked by a dealer's service center or another qualified service center or repair shop.</p> <p>Steering assistance has failed. You can continue your journey, but moderate your speed and</p>

		exercise due caution. Markedly different steering response. Have the system checked as soon as possible.
	<b>Emission Light</b>	<p>The warning light lights up: Emissions are deteriorating. Have the vehicle checked as soon as possible.</p> <p>The warning light flashes under certain circumstances: This indicates that there is excessive misfiring in the engine. Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.</p>
	<b>Acoustic Pedestrian Protection Inactive Light</b>	Acoustic pedestrian protection defective. Have the system checked by a dealer's service center or another qualified service center or repair shop.
	<b>Drive Power</b>	The drive power is reduced, for instance due to a heavily discharged high-voltage battery.
	<b>Service Requirement Warning Light</b>	The engine will start the next time the Start/Stop button is touched, possibly without the brake or clutch being depressed. Check the service requirements.
	<b>Service Requirement Warning Light</b>	Illuminates if the temperature falls to around +3C / 37F. A signal will sound and this warning light will come on. This is to warn you to drive cautiously. This also signifies an increased risk of sheet ice on the roads.
	<b>External Temperature Warning Light</b>	The engine refuses to start. Depress the brake or clutch to start the engine.

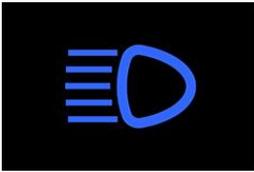
	<p><b>Shift/ Start Lock Indicator</b></p>	<p>The roadside parking lamps are still on. Switch off the roadside parking lights.</p>
	<p><b>Roadside Parking Light Indicator</b></p>	<p>The fuel cap is missing or loose. Make sure that the fuel cap is correctly positioned and close it until it clicks audibly. Do not jam the strap between the fuel cap and the vehicle.</p>
	<p><b>Check Gas Cap Indicator</b></p>	<p>The windshield washer fluid level is too low. Add washer fluid as soon as possible.</p>
	<p><b>Low Washer Fluid Indicator</b></p>	<p>The remote control is malfunctioning or, in cars with Comfort Access, was not detected. The engine cannot be started. Have the remote control checked, if necessary.</p>
	<p><b>Key Fob Malfunction Indicator</b></p>	<p>The battery in the remote control is discharged. Use the remote control for a longer journey or, in cars with Comfort Access, replace the battery.</p>
	<p><b>Low Battery Key Fod Indicator</b></p>	<p>Brake light control failed or The fuel supply is malfunctioning.</p> <p>You can continue your journey, but moderate your speed and exercise due caution. Transmission limp-home program with reduced acceleration is active. Have the system checked immediately.</p>
	<p><b>Car On Lift Warning Light</b></p>	<p>Automatic selector lever locked: The selector lever is locked in position P with the engine running or the ignition switched on and the brake depressed or</p> <p>The brake signal is malfunctioning: a gear can be engaged without depressing the brake. Have the system checked as soon as possible. Manually unlock the selector lever lock. To</p>

		engage a gear while the vehicle is at a standstill, always depress the brake. Before leaving the vehicle, move the selector lever to position P and switch off the engine.
	<b>Transmission Warning Light</b>	The transmission is too hot. Avoid high engine loads. You can continue your journey, but moderate your speed and exercise due caution.
	<b>Transmission Oil Temperature Light</b>	Selector lever position P not engaged. The vehicle is not secured against rolling.
	<b>Roll Away Potential Indicator</b>	A bulb of the exterior lighting system has failed. Have the exterior lighting checked as soon as possible.
	<b>Lamp Out Indicator</b>	A low-beam headlight or front fog light has failed. Have the lights checked as soon as possible.
	<b>Low-beam Headlight or Front Fog Light Failed Indicator</b>	A high-beam headlight has failed. Have the high-beam headlights checked.
	<b>High-beam Headlight Indicator</b>	A rear fog light has failed. Have the rear fog lights checked.
	<b>Rear Fog Light Failed Indicator</b>	The headlight beam throw adjustment has failed. Have the headlight beam throw adjustment system checked.

	<b>Headlight Beam Throw Adjustment Failed Indicator</b>	The Adaptive Light Control has failed.
	<b>Adaptive Light Control Failed Indicator</b>	The coolant level is too low. Add coolant immediately.
	<b>Low Coolant Level Warning Light</b>	Service is due. Arrange a service appointment. Check the service requirements.
	<b>Speed Limit Indicator</b>	The set speed limit was exceeded.
	<b>Convertible Top Control Failed Indicator</b>	Convertible top drive overheated! Allow the convertible top drive to cool.
	<b>Sliding Convertible Top Indicator</b>	Failure of the convertible top/sliding sunroof control. Close the convertible top/sliding sunroof manually. Contact your service center.
	<b>Trunk Cover Indicator</b>	The convertible top cannot be operated. Move the trunk cover into the required position.
	<b>Rear Spoiler Indicator</b>	The rear spoiler is extended. Before driving into the car wash, retract the rear spoiler.

Symbol	Name	Meaning
	<b>Turn Signal Indicator</b>	Turn signal switched on. Unusually rapid flashing of the indicator light indicates that a turn signal bulb has failed.
	<b>Parking Lights, Headlight Indicator</b>	Parking lights or headlights are switched on.
	<b>Bad Weather Light</b>	Bad weather light is switched on.
	<b>Rear Fog Light</b>	Rear fog lights are activated.
	<b>Front Fog Light</b>	Front fog lights are activated.
	<b>High-beam Assistant</b>	High-beam Assistant is switched on. High beams are switched on and off automatically depending on the traffic situation.
	<b>Cruise Control</b>	The system is switched on. It maintains the speed that was set using the control elements on the steering wheel.
	<b>Speed Limiter</b>	The indicator light illuminates: the system is switched on. The indicator light flashes: the set speed limit has been exceeded. If this happens, a

		signal sounds. Reduce speed or deactivate system.
	<b>Lane Departure Warning Light</b>	The indicator light lights up: the system is activated. At least one lane marking was detected and warnings can be issued.

Symbol	Name	Meaning
	<b>High Beam Indicator</b>	High beams are switched on.

# Questions? Contact us.



[www.obdadvisor.com](http://www.obdadvisor.com)  
[obdadvisor.scanner@gmail.com](mailto:obdadvisor.scanner@gmail.com)