


# SUBARU

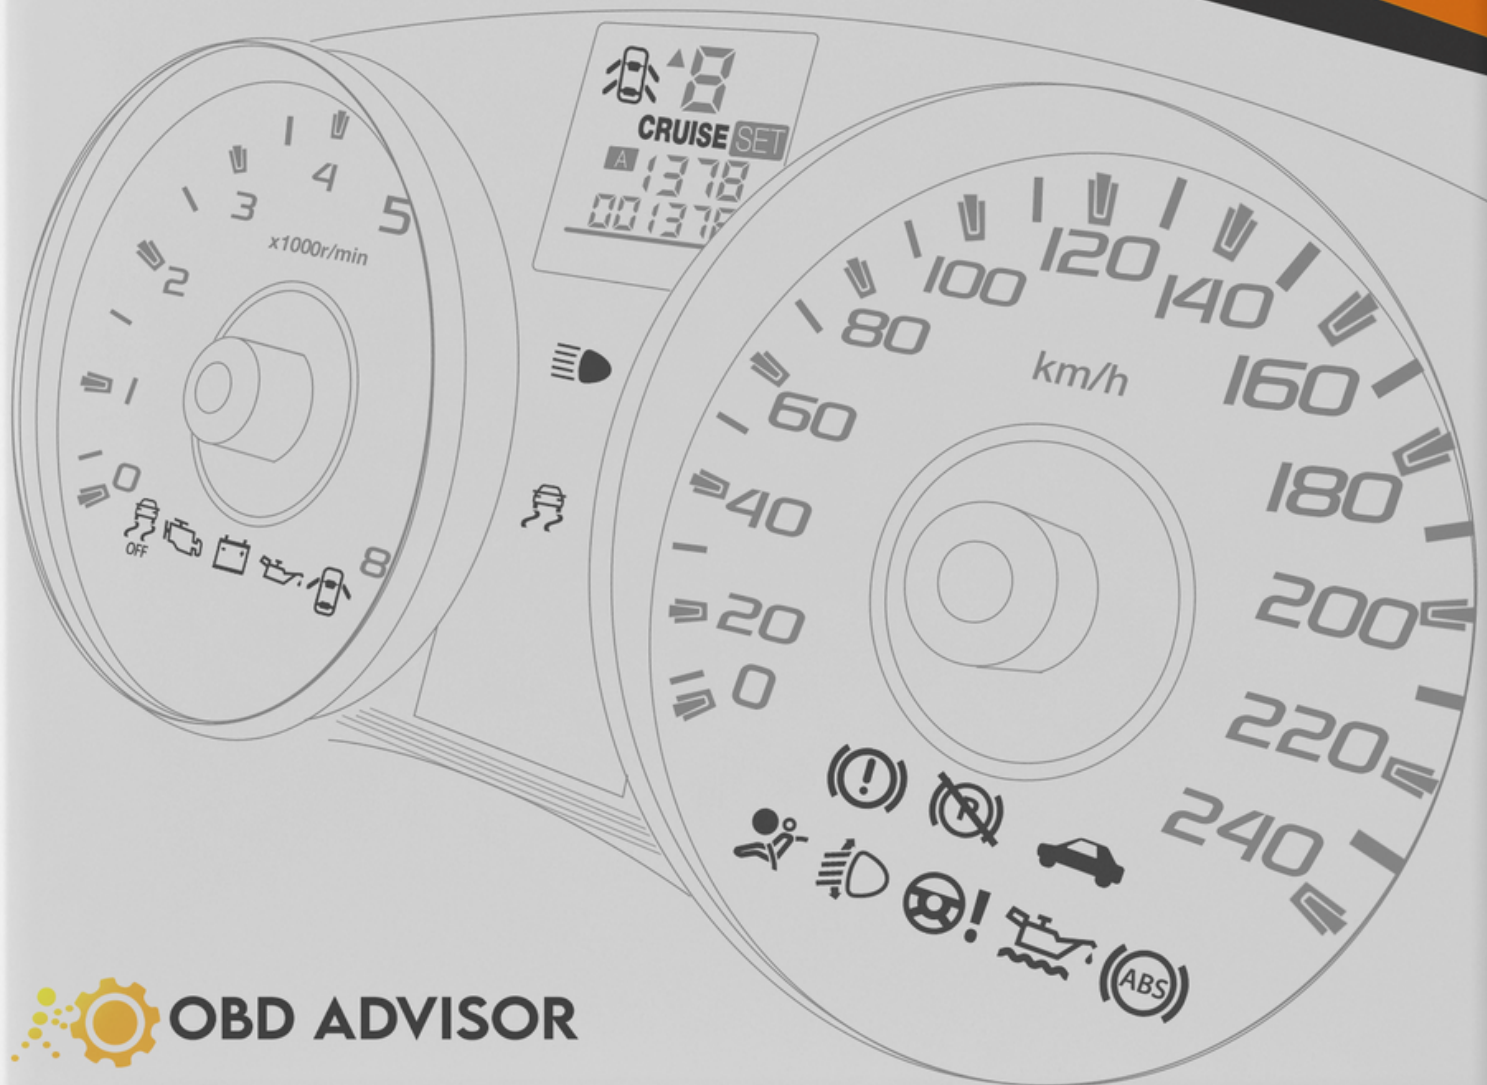




## Warning Lights & Indicators


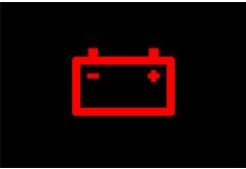






# TABLE OF CONTENTS









Red Warning Lights	3
Yellow Warning Lights	10
Green Indicators	23
Blue, Gray, & White Indicators	25

Symbol	Name	Meaning
	<p><b>Seatbelt Warning Light</b></p>	<p>Your vehicle is equipped with a seatbelt warning device at the driver's and passenger's seats, as required by current safety standards.</p>
	<p><b>Front Seatbelt Warning Light</b></p>	<p>With the ignition switch turned to the "ON" position, this device reminds the driver and front passenger to fasten their seatbelts by illuminating the warning lights in the locations indicated in the following illustration and sounding a chime.</p>
		<p>When the ignition switch is turned to the "ON" position, the driver's and/or front passenger's warning light will illuminate, then it will blink for several seconds. If the seatbelt of the driver's seat is not fastened, the warning chime may make a peep sound.</p>
	<p><b>Rear Seatbelt Warning Light</b></p>	<p>With the ignition switch turned to the "ON" position, the seatbelt warning light and chime reminds the rear passenger to fasten their seatbelt by illuminating the warning lights in the locations indicated in the above illustration and sounding a chime.</p>
		<p>The driver must check that the all passengers have fastened their seatbelts properly since the seatbelt warning system may not detect passengers under the following circumstances.</p> <ul style="list-style-type: none"> <li>– When cushions or child restraint systems, etc., are used.</li> <li>– When a child or small adult is sitting in the seat.</li> </ul> <p>Observe the following precautions</p> <ul style="list-style-type: none"> <li>– Do not apply any strong impact to the rear seat.</li> <li>– Do not fold the seatback forward when objects are on the seat.</li> <li>– Do not spill liquid on the rear seat. If liquid is spilled, wipe it off immediately.</li> <li>– Do not remove or disassemble the rear seat.</li> </ul>

	<p align="center"><b>SRS Airbag System Warning Light</b></p>	<p>If the warning light exhibits any of the following conditions, immediately stop the vehicle in a safe place, and consult a SUBARU dealer. Unless a technician checks and repairs the system as needed, the seatbelt pretensioners and/or the SRS airbag will not operate properly in the event of a collision, which may result in injury.</p> <ul style="list-style-type: none"> <li>- Flashing or flickering of the warning light</li> <li>- No illumination of the warning light when the ignition switch is first turned to the "ON" position</li> <li>- Continuous illumination of the warning light</li> <li>- Illumination of the warning light while driving</li> </ul>
	<p align="center"><b>Charge Warning Light</b></p>	<p>If this light illuminates when the engine is running, it may indicate that the charging system is not working properly.</p> <p>If the light illuminates while driving or does not turn off after the engine starts, stop the engine at the first safe opportunity and check the alternator belt. If the belt is loose, broken or if the belt is in good condition but the light remains illuminated, contact your nearest SUBARU dealer immediately.</p>
	<p align="center"><b>Oil Pressure Warning Light</b></p>	<p>If this light illuminates when the engine is running, it may indicate that the engine oil pressure is low and the lubricating system is not working properly.</p> <p>If the light illuminates while driving or does not turn off after the engine starts, stop the engine at the first safe opportunity and contact your nearest SUBARU dealer immediately.</p>
	<p align="center"><b>Engine Low Oil Level Warning Indicator</b></p>	<p>This indicator appears when the engine oil level decreases to the lower limit. If the warning indicator appears, check the engine oil level on a level surface. When the engine oil level is not within the normal range, refill with engine oil.</p> <p>After adding or changing the engine oil, warm up the engine and stop it on a level surface, then start the engine after a lapse of 1 minute or more. Confirm that the warning indicator has turned off after the engine has started. If the warning indicator does not turn off after</p>

		refilling the engine oil, or the indicator appears even though the engine oil level is within the normal range, have the vehicle checked by a SUBARU dealer.
	<b>Brake System Warning Light</b>	<p><b>WARNING</b></p> <p>Driving with the brake system warning light on is dangerous. This indicates your brake system may not be working properly. If the light remains illuminated, have the brakes inspected by a SUBARU dealer immediately.</p> <p>If at all in doubt about whether the brakes are operating properly, do not drive the vehicle. Have your vehicle towed to the nearest SUBARU dealer for repair.</p> <p>If the brake system warning light illuminates, the electronic parking brake system may be malfunctioning. Immediately stop your vehicle in a safe location, use tire stops under the tires to prevent the vehicle from moving and contact your SUBARU dealer.</p> <p><b>NOTE</b></p> <p>Even if the brake system warning light illuminates, if the warning light behavior is as described in the following examples, the electronic parking brake system is not malfunctioning.</p> <ul style="list-style-type: none"> <li>– The warning light turns off when the electronic parking brake is applied or released.</li> <li>– The warning light turns off when the ignition switch is turned to the “ON” position again.</li> </ul> <p>The brake system warning light may illuminate immediately after the engine is started. However, it is not malfunctioning if the warning light turns off after the electronic parking brake is released.</p> <p>The brake system warning light may illuminate after the electronic parking brake is frequently applied and released. However, the electronic parking brake system is not malfunctioning if the light turns off after a short period of time.</p> <p>When the engine is started while the electronic parking brake is applied/ released, the system may judge an abnormal situation and the warning light may illuminate. If the warning light illuminates, turn the ignition switch once to the “LOCK”/“OFF” position and then restart</p>
	<b>Brake System Warning Light</b>	



		the engine. Then, apply/release the electronic parking brake. If the warning light turns off, the system will be restored.
 	<b>Door Open Indicator</b>	<p>When any of the doors, the rear gate (Outback/Subaru Outback Wilderness) or the trunk lid (Legacy) is not fully closed, the door open indicator appears. This function is effective even if the ignition switch is in the "LOCK"/"OFF" or "ACC" position or the key is removed from the ignition switch (models without "keyless access with push-button start system").</p> <p>The open door is indicated by the corresponding part of the door open indicator. Always make sure this indicator does not appear before you start to drive.</p>
	<b>Engine Hood Open Warning Light</b>	<p>The warning light illuminates if the engine hood is not fully closed. This function is effective even if the ignition switch is in the "LOCK"/"OFF" or "ACC" position, or the key is removed from the ignition switch (models without "keyless access with push-button start system").</p> <p>Always make sure this light is not illuminated before you start to drive.</p>
	<b>Power Steering Warning Light</b>	<p>While the engine is running, this warning light illuminates when a malfunction has been detected in the electric power steering system.</p> <p><b>CAUTION</b> When the power steering warning light is illuminated, there may be more resistance when the steering wheel is operated. Drive carefully to the nearest SUBARU dealer and have the vehicle inspected immediately.</p>
	<b>Security Indicator Light</b>	<p>This indicator light shows the status of the alarm system. It also indicates operation of the immobilizer system.</p> <p><b>! Alarm system</b> It blinks to show the driver the operational status of the alarm system.</p> <p><b>! Immobilizer system</b></p>




		<p>The security indicator light starts blinking in the following conditions.</p> <p><b>For models with “keyless access with push-button start system”:</b></p> <p>Immediately after the push-button ignition switch is turned to the “OFF” position.</p> <p>Immediately after the driver’s door is opened or closed when all of the following conditions are met.</p> <ul style="list-style-type: none"> <li>– The push-button ignition switch is in the “ON” or “ACC” position.</li> <li>– The engine is not running.</li> </ul> <p>In the event that an unauthorized key is used (for example, the key is unregistered or the ID code does not match), the power is not switched to “ON” and the security indicator light continues blinking.</p> <p><b>For models without “keyless access with push-button start system”:</b></p> <p>Approximately 60 seconds after the ignition switch is turned from the “ON” position to the “ACC” or “LOCK” position.</p> <p>Immediately after the key is pulled out. If the indicator light does not blink in the above conditions, it may indicate that immobilizer system may be malfunctioning. Contact your nearest SUBARU dealer immediately. In the event that an unauthorized key (for example, an unauthorized duplicate) is used, the security indicator light illuminates.</p>
	<p style="text-align: center;"><b>Coolant Temperature High Warning Light</b></p>	<p>After turning the ignition switch to the “ON” position, if this indicator light/warning light behaves in any of the following ways, the electrical system may be malfunctioning. Contact your SUBARU dealer immediately for an inspection.</p> <ul style="list-style-type: none"> <li>- It remains blinking in RED.</li> <li>- It remains illuminated in RED for more than 2 seconds.</li> <li>- It remains blinking in RED and BLUE alternately.</li> </ul>



		<p>While driving, if this indicator light/warning light behaves in any of the following ways, take the specified appropriate measure listed below.</p> <ul style="list-style-type: none"> <li>- Blinking or illuminated in RED: Safely stop the vehicle as soon as possible, and refer to the emergency steps to take in the case of engine overheating. After that, have the system checked by your nearest SUBARU dealer.</li> <li>- Blinking in RED and BLUE alternately: The electrical system may be malfunctioning. Contact your SUBARU dealer for an inspection.</li> </ul> <p>This coolant temperature low indicator light/coolant temperature high warning light has the following three functions.</p> <ul style="list-style-type: none"> <li>- Illumination in BLUE indicates insufficient warming up of the engine.</li> <li>- Blinking in RED indicates that the engine is close to overheating.</li> <li>- Illumination in RED indicates overheating condition of the engine.</li> </ul> <p>For a system check, this indicator light/warning light illuminates in RED for approximately 2 seconds when the ignition switch is turned to the "ON" position. After that, this indicator light/warning light changes to BLUE and maintains illumination in BLUE. This BLUE illuminated light turns off when the engine is warmed up sufficiently.</p> <p>If the engine coolant temperature increases over the specified range, the indicator light/warning light blinks in RED. At this time, the engine is close to overheating. If the engine coolant temperature increases further, the indicator light/warning light illuminates in RED continuously. At this time, the engine may be overheating.</p> <p>When the indicator light/warning light blinks in RED or illuminates in RED, safely stop the vehicle as soon as possible, and refer to the emergency steps to take in the case of engine overheating. After that, have the system checked by your nearest SUBARU dealer. Also, if the indicator light/warning light often blinks in RED, the electrical system may be</p>
--	--	---






		malfunctioning. Contact your SUBARU dealer for an inspection.
--	--	---

Symbol	Name	Meaning
	Check Engine Light	<p><b>CAUTION</b></p> <p>If the CHECK ENGINE warning light/ malfunction indicator light illuminates while you are driving, have your vehicle checked/repaired by your SUBARU dealer as soon as possible. Continued vehicle operation without having the emission control system checked and repaired as necessary could cause serious damage, which may not be covered by your vehicle's warranty. If this light illuminates steadily or blinks while the engine is running, it may indicate that there is at least one problem or potential problem somewhere in the emission control system.</p> <p><b>! If the light illuminates constantly</b></p> <p>If the light illuminates constantly while driving or does not turn off after the engine starts, an emission control system malfunction has been detected. You should have your vehicle checked by an authorized SUBARU dealer immediately.</p>
	Check Engine Light	<p><b>NOTE</b></p> <p>This light also illuminates when the fuel filler cap is not tightened until it clicks. If you have recently refueled your vehicle, the cause of the CHECK ENGINE warning light/malfunction indicator light coming on could be a loose or missing fuel filler cap. Remove the cap and retighten it until it clicks. Make sure nothing is interfering with the sealing of the cap. Tightening the cap will not make the CHECK ENGINE warning light/malfunction indicator light turn off immediately. It may take several driving trips. If the light does not turn off, take your vehicle to your authorized SUBARU dealer immediately.</p> <p><b>! If the light is blinking</b></p> <p>If the light is blinking while driving, an engine misfire condition has been detected which may damage the emission control system. To prevent serious damage to the emission control system, you should conform to the following instructions.</p>



		<ul style="list-style-type: none"> <li>- Reduce vehicle speed.</li> <li>- Avoid hard acceleration.</li> <li>- Avoid steep uphill grades.</li> <li>- Reduce the amount of cargo, if possible.</li> <li>- Stop towing a trailer as soon as possible (Outback/Subaru Outback Wilderness).</li> </ul> <p>The CHECK ENGINE warning light/malfunction indicator light may stop blinking and illuminate steadily after several driving trips. You should have your vehicle checked by an authorized SUBARU dealer immediately.</p>
	<p><b>AT OIL TEMP Warning Light</b></p>	<p>If this light illuminates when the engine is running, it may indicate that the transmission fluid temperature is too hot.</p> <p>If the light illuminates while driving, immediately stop the vehicle in a safe place and let the engine idle until the warning light turns off.</p> <p><b>! Transmission control system warning</b></p> <p>If the “AT OIL TEMP” warning light flashes after the engine has started, it may indicate that the transmission control system is not working properly. Contact your nearest SUBARU dealer for service immediately.</p>
  	<p><b>ABS Warning Light</b></p>	<p><b>CAUTION</b></p> <p>If any of the following conditions occur, we recommend that you have the ABS repaired at the first available opportunity by your SUBARU dealer.</p> <ul style="list-style-type: none"> <li>– The warning light does not illuminate when the ignition switch is turned to the “ON” position.</li> <li>– The warning light illuminates when the ignition switch is turned to the “ON” position, but it does not turn off even after starting the vehicle.</li> <li>– The warning light illuminates during driving.</li> </ul> <p>When the warning light is on (and brake system warning light is off), the ABS function shuts down; however, the conventional brake system continues to operate normally.</p>

		<p>The ABS warning light illuminates together with the brake system warning light if the EBD system malfunctions.</p> <p><b>NOTE</b></p> <p>If the warning light behavior is as described in the following conditions, the ABS may be considered normal.</p> <ul style="list-style-type: none"> <li>- The warning light illuminates right after the engine is started but turns off immediately, remaining off.</li> <li>- The warning light remains illuminated after the engine has been started, but it turns off while driving.</li> <li>- The warning light illuminates during driving, but it turns off immediately and remains off.</li> </ul> <p>When driving with an insufficient battery voltage such as when the engine is jump started, the ABS warning light may illuminate. This is due to the low battery voltage and does not indicate a malfunction. When the battery becomes fully charged, the light will turn off.</p>
  	<p style="text-align: center;"><b>Electronic Parking Brake Indicator Light</b></p>	<p><b>WARNING</b></p> <p>When you release the electronic parking brake while the engine is running, the electronic parking brake indicator light will turn off. However, if the light still illuminates, stop the vehicle in a safe location immediately and have the system inspected by a SUBARU dealer.</p> <p>If at all in doubt about whether the brakes are operating properly, do not drive the vehicle. Have your vehicle towed to the nearest SUBARU dealer for repair.</p> <p>If the electronic parking brake indicator light flashes, the electronic parking brake system may be malfunctioning. Immediately stop your vehicle in a safe location, use tire stops under the tires to prevent the vehicle from moving and contact your SUBARU dealer.</p> <p><b>NOTE</b></p> <p>When the ignition switch is turned to the "LOCK"/"OFF" position with the electronic</p>






		<p>parking brake applied, the electronic parking brake indicator light remains illuminated for approximately 30 seconds and then turns off.</p> <p>When the electronic parking brake switch is pulled to apply the electronic parking brake while the ignition switch is in the "LOCK"/"OFF" position, the electronic parking brake indicator light illuminates, remains illuminated for approximately 30 seconds and then turns off.</p> <p>Even if the electronic parking brake indicator light flashes, if the warning light behavior is as described in the following examples, the electronic parking brake system is not malfunctioning. The indicator light turns off when the electronic parking brake is released.</p> <p>The electronic parking brake indicator light may flash immediately after the engine is started. However, it is not malfunctioning if the indicator light turns off after the electronic parking brake is released.</p> <p>The electronic parking brake indicator light may flash after the electronic parking brake is frequently applied and released. However, the electronic parking brake system is not malfunctioning if the light turns off after a short period of time.</p> <p>The electronic parking brake indicator light flashes when the electronic parking brake system is malfunctioning. If the indicator light flashes, promptly park in a safe location as soon as possible and contact your SUBARU dealer. The electronic parking brake indicator light remains illuminated when the parking brake cannot be released even if the parking brake switch is pushed.</p> <p><b>! Parking brake apply inhibit warning</b></p> <p>The electronic parking brake indicator light flashes for 10 seconds and a chirp sound will be heard if the parking brake switch is operated when the parking brake cannot be applied.</p> <p><b>! Frequent operation warning</b></p>
--	--	--


		The electronic parking brake indicator light flashes for 10 seconds and a chirp sound will be heard if the parking brake switch is operated too frequently. In this case, the operation of the parking brake switch is restricted to protect the electronic parking brake system.
	<b>Low Fuel Warning Light</b>	The low fuel warning light illuminates when the tank is nearly empty approximately 2.6 US gal (10.0 liters, or 2.2 Imp gal). It only operates when the ignition switch is in the "ON" position.
	<b>All-Wheel Drive Warning Light</b>	<p><b>WARNING</b></p> <p>Continued driving with the AWD warning light flashing can lead to powertrain damage. If the AWD warning light flashes, promptly park in a safe location and then check whether all four tires are the same diameter and whether any of the tires has a puncture or has lost air pressure for some other reason.</p> <p><b>NOTE</b></p> <p>If the temporary spare tire is used, the AWD warning light may flash. Use of the temporary spare tire should therefore be restricted to the minimum time necessary. Replace the temporary spare tire with a conventional tire as soon as possible.</p> <p>This light flashes if the vehicle is driven with tires of different diameters fitted on its wheels or with the air pressure excessively low in any of its tires.</p>
	<b>Vehicle Dynamics Control Warning Light</b>	<p><b>! Vehicle Dynamics Control warning light CAUTION</b></p> <p>The Vehicle Dynamics Control system provides its ABS control through the electrical circuit of the ABS. Accordingly, if the ABS is inoperative, the Vehicle Dynamics Control system becomes unable to provide ABS control. As a result, the Vehicle Dynamics Control system becomes inoperative, causing the warning light to illuminate. Although both the Vehicle Dynamics Control and ABS are inoperative in this case, the ordinary functions of the brake system are still</p>







	<p>available. You will be safe while driving in this condition, but drive carefully and have your vehicle checked at a SUBARU dealer as soon as possible.</p> <p><b>NOTE</b></p> <p>If the electrical circuit of the Vehicle Dynamics Control system itself malfunctions, the warning light only illuminates. At this time, the ABS (Anti-lock Brake System) remains fully operational.</p> <p>The warning light illuminates when the electronic control system of the ABS/Vehicle Dynamics Control system malfunctions.</p> <p>The Vehicle Dynamics Control system is probably inoperative under any of the following conditions. Have your vehicle checked at a SUBARU dealer immediately.</p> <p>The warning light does not illuminate when the ignition switch is turned to the "ON" position.</p> <p>The warning light illuminates while the vehicle is running.</p> <p><b>NOTE</b></p> <p>If the warning light behavior is as described in the following examples, the Vehicle Dynamics Control system may be considered normal.</p> <p>The warning light illuminates right after the engine is started but turns off immediately and remains off.</p> <p>The warning light illuminates after the engine has started and turns off while the vehicle is subsequently being driven.</p> <p>The warning light illuminates during driving, but turns off immediately and remains off.</p> <p>! Vehicle Dynamics Control operation indicator light</p> <p>The indicator light flashes during activation of the skid suppression function and during activation of the traction control function.</p> <p><b>NOTE</b></p> <p>The light may remain illuminated for a short period of time after the engine has been started,</p>
--	---








		<p>especially in cold weather. This does not indicate the existence of a problem. The light should turn off as soon as the engine has warmed up.</p> <p>The indicator light illuminates when the engine has developed a problem and the CHECK ENGINE warning light/malfunction indicator light is on.</p> <p>The Vehicle Dynamics Control system is probably malfunctioning under the following condition. Have your vehicle checked at a SUBARU dealer as soon as possible.</p> <p>The light does not turn off even after the lapse of several minutes (the engine has warmed up) after the engine has started.</p>
	<p><b>Vehicle Dynamics Control OFF Indicator Light</b></p>	<p>The light illuminates when “Vehicle Dynamics Control” is selected to deactivate the Vehicle Dynamics Control system.</p> <p>The Vehicle Dynamics Control system is probably malfunctioning under any of the following conditions. Have your vehicle checked at a SUBARU dealer immediately.</p> <ul style="list-style-type: none"> <li>- The light does not illuminate while the system check.</li> <li>- The light does not turn off even after a period of approximately 2 seconds after the ignition switch has been turned to the “ON” position.</li> </ul>
	<p><b>Access Key Warning Indicator</b></p>	<p>The keyless access with push-button start system is equipped with a warning chime and the access key warning indicator in order to minimize improper operations and help protect your vehicle from theft.</p> <p>When the warning chime sounds and/or the warning indicator appears, take the appropriate action.</p> <p>You cannot turn the warning chimes off. However, the volume setting of the outside warning chime can be changed by a SUBARU dealer. Consult your SUBARU dealer for details.</p>









	<b>Automatic Headlight Beam Leveler Warning Light</b>	<p>This light illuminates when the automatic headlight beam leveler does not operate normally.</p> <p>If this light illuminates while driving or does not turn off approximately 3 seconds after turning the ignition switch to the "ON" position, have your vehicle inspected at your SUBARU dealer.</p>
	<b>LED Headlight Warning Light</b>	<p>This light illuminates if the LED headlights malfunction. Have your vehicle inspected at a SUBARU dealer as soon as possible.</p>
	<b>Steering Responsive Headlight OFF Indicator Light</b>	<p>This light illuminates when the Steering Responsive Headlight function is off.</p>
	<b>Steering Responsive Headlight Warning Light</b>	<p>The light illuminates when a malfunction occurs in the Steering Responsive Headlight.</p>
	<b>Low Tire Pressure Warning Light</b>	<p>When the ignition switch is turned to the "ON" position, the low tire pressure warning light will illuminate for approximately 2 seconds to check that the tire pressure monitoring system (TPMS) is functioning properly. If there is no problem and all tires are properly inflated, the light will go out. Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)</p> <p>As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly underinflated. Accordingly, when</p>








		<p>the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.</p> <p>Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale. Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.</p> <p>When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.</p> <p>Should the warning light illuminate steadily after blinking for approximately one minute, have the system inspected by your nearest SUBARU dealer as soon as possible.</p>
	<p><b>Front Passenger's Frontal Airbag ON Indicator</b></p>	<p>The front passenger's frontal airbag ON and OFF indicators show you the status of the front passenger's SRS frontal airbag. The indicators are located as shown in the illustration. When the ignition switch is turned to the "ON"</p>







		<p>position, both the ON and OFF indicators illuminate for 6 seconds during which time the system is checked. Following the system check, both indicators turn off for 2 seconds. After that, one of the indicators illuminates depending on the status of the front passenger's SRS frontal airbag determined by the SUBARU advanced frontal airbag system monitoring.</p>
		<p>If the front passenger's SRS frontal airbag is activated, the passenger's frontal airbag ON indicator will illuminate while the OFF indicator will remain off.</p>
	<p><b>Front Passenger's Frontal Airbag OFF Indicator</b></p>	<p>If the front passenger's SRS frontal airbag is deactivated, the passenger's frontal airbag ON indicator will remain off while the OFF indicator will illuminate.</p> <p>With the ignition switch turned to the "ON" position, if both the ON and OFF indicators remain illuminated or off simultaneously even after the system check period, the system is malfunctioning. Contact your SUBARU dealer immediately for an inspection.</p>
	<p><b>Windshield Washer Fluid Warning Light</b></p>	<p>This light appears when the fluid level in the windshield washer fluid tank decreases to the lower limit (approximately 0.6 US qt (0.6 liters, 0.5 Imp qt)).</p>
	<p><b>Auto Start Stop OFF Indicator Light</b></p>	<p>This light will illuminate when "Auto Start Stop" is touched to prevent the Auto Start Stop system from operating. It will turn off when "Auto Start Stop" is touched once more to enable operation of the Auto Start Stop system.</p>
	<p><b>Auto Start Stop Warning Light</b></p>	<p>The Auto Start Stop warning light will illuminate in yellow if you open the engine hood when the engine has been temporarily stopped by the Auto Start Stop system. In this case, to ensure safety, the engine will not be automatically restarted, even if you release the brake pedal. Use normal operation to restart the engine.</p>

	<p><b>BSD/RCTA Warning Indicator</b></p>	<p>This warning indicator appears on the combination meter display (color LCD) when the BSD (Blind Spot Detection) or RCTA (Rear Cross Traffic Alert) is malfunctioning for any reason.</p> <p>If this indicator remains displayed, have your vehicle inspected by your SUBARU dealer as soon as possible.</p>
	<p><b>BSD/RCTA OFF Indicator</b></p>	<p>This indicator appears on the combination meter display (color LCD) when "BSD/ RCTA" is touched to deactivate the BSD (Blind Spot Detection) and RCTA (Rear Cross Traffic Alert), or when the BSD/ RCTA is suspended temporarily</p>
	<p><b>Icy Road Surface Warning Indicator</b></p>	<p>When the outside temperature is 37°F (3°C) or less, the icy road surface warning indicator will illuminate to inform the driver that the road surface may be frozen.</p>
	<p><b>RAB Warning Indicator</b></p>	<p>This indicator illuminates if the Reverse Automatic Braking (RAB) system malfunctions.</p>
	<p><b>RAB OFF Indicator</b></p>	<p>This indicator illuminates when the Reverse Automatic Braking (RAB) system is turned OFF, or when the Reverse Automatic Braking (RAB) system is suspended temporarily.</p>
	<p><b>Sonar Audible Alarm OFF Indicator</b></p>	<p>This indicator illuminates when the sonar audible alarm is turned OFF.</p>
	<p><b>Driver Monitoring System Warning Light</b></p>	<p>This warning light illuminates if the Driver Monitoring System malfunctions. Have your vehicle inspected at a SUBARU dealer as soon as possible.</p>

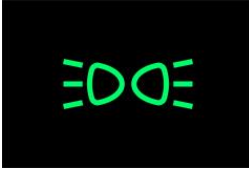

	<b>Driver Monitoring System OFF Indicator Light</b>	<p>This indicator illuminates when “Driver Monitoring System” is touched to deactivate Driver Monitoring System.</p>
	<b>Driver Monitoring System Temporary Stop Indicator Light</b>	<p>This indicator illuminates when the Driver Monitoring System is temporarily stopped.</p>
	<b>Hill Start Assist Warning Light</b>	<p>While the engine is running, if there are any malfunctions in the Hill start assist system, the warning light will illuminate.</p>
	<b>Intelligent (I) Mode Indicator</b>	<p>This light indicates the current SI-DRIVE mode. The linear acceleration characteristic of the Intelligent (I) mode is ideal for normal driving usage.</p> <p>The Intelligent (I) mode provides well-balanced performance with greater fuel efficiency and smooth driveability without stress. Power delivery is moderate during acceleration for maximum fuel efficiency.</p> <p>This is ideal for around-town driving and situations that do not require full power output. It provides better control in difficult driving conditions, such as slippery roads or loose surfaces, due to gentler throttle response.</p>
	<b>Sport (S) Mode Indicator</b>	<p>This light indicates the current SI-DRIVE mode. The Sport (S) mode provides the engine power desired by those who want to make the driving experience their own personal adventure.</p>
	<b>Sport Sharp (S#) Mode Indicator</b>	<p>This light indicates the current SI-DRIVE mode. For sports-minded drivers, the Sport Sharp (S#) mode offers an exhilarating level of engine performance and control. The throttle becomes more responsive regardless of the engine speed.</p> <p>Delivering maximum driving enjoyment, this mode is ideal for tackling twisting roads and for</p>




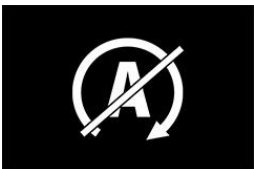

		merging or overtaking other vehicles on the freeway with confidence.
--	--	--

Symbol	Name	Meaning
	<b>Auto Vehicle Hold Indicator Light</b>	This indicator light illuminates when the Auto Vehicle Hold is activated. This indicator blinks while the vehicle is stopped by the Auto Vehicle Hold function.
	<b>Auto Vehicle Hold On Indicator Light</b>	
	<b>Auto Vehicle Hold Operation Indicator Light</b>	This indicator light illuminates while the vehicle is stopped by the Auto Vehicle Hold function.
	<b>Turn Signal Indicator Lights</b>	These lights show the operation of the turn signal or lane change signal. If the indicator lights do not blink or blink rapidly, the turn signal bulb may be burned out. Replace the bulb as soon as possible.
	<b>High Beam Assist Indicator</b>	This indicator appears when the high beam assist function is activated.
	<b>Front Fog Light Indicator Light</b>	This indicator light illuminates while the front fog lights are illuminated.
	<b>Hill Descent Control Indicator</b>	This indicator appears while the hill descent control function is in standby. It will flash while the hill descent control function is operating. It will disappear when the hill descent control function is not available.

	<p><b>Headlight Indicator Light</b></p>	<p>This indicator light illuminates under the following conditions.</p> <ul style="list-style-type: none"> <li>- The light switch is turned to the “Headlight” or “Low beam” position.</li> <li>- The light switch is in the “AUTO” position and the headlights illuminate automatically.</li> </ul>
	<p><b>Auto Start Stop Indicator Light</b></p>	<p>This indicator light illuminates when the engine has been temporarily stopped by the Auto Start Stop system. It will turn off when the engine is restarted.</p>
	<p><b>Driver Monitoring System Operation Indicator Light</b></p>	<p>This indicator illuminates when the Driver Monitoring System is activated.</p>
	<p><b>Hill Start Assist Off Indicator Light</b></p>	<p>While the Hill start assist system is deactivated, the Hill start assist OFF indicator light illuminates continuously to inform the driver that the Hill start assist system is not operational.</p>
	<p><b>Cruise Control Indicator Light</b></p>	<p>This light illuminates when the cruise control main button is pressed to activate the cruise control function.</p> <p>If this light blinks, do not use the cruise control. In addition, if it blinks frequently, contact your SUBARU dealer for an inspection.</p>
	<p><b>Cruise Control Set Indicator Light</b></p>	<p>This light illuminates when vehicle speed has been set to use the cruise control function.</p>



Symbol	Name	Meaning
	<b>High Beam Indicator Light</b>	<p>This light shows that the headlights are in the high beam mode.</p> <p>This indicator light also illuminates when operating the headlight flasher.</p>
	<b>Coolant Temperature Low Indicator Light</b>	<p>This coolant temperature low indicator light/coolant temperature high warning light has the following three functions.</p> <ul style="list-style-type: none"> <li>- Illumination in BLUE indicates insufficient warming up of the engine.</li> <li>- Blinking in RED indicates that the engine is close to overheating.</li> <li>- Illumination in RED indicates overheating condition of the engine.</li> </ul> <p>For a system check, this indicator light/warning light illuminates in RED for approximately 2 seconds when the ignition switch is turned to the "ON" position. After that, this indicator light/warning light changes to BLUE and maintains illumination in BLUE. This BLUE illuminated light turns off when the engine is warmed up sufficiently.</p> <p>If the engine coolant temperature increases over the specified range, the indicator light/warning light blinks in RED. At this time, the engine is close to overheating.</p> <p>If the engine coolant temperature increases further, the indicator light/warning light illuminates in RED continuously. At this time, the engine may be overheating.</p> <p>When the indicator light/warning light blinks in RED or illuminates in RED, safely stop the vehicle as soon as possible, and refer to the emergency steps to take in the case of engine overheating. After that, have the system checked by your nearest SUBARU dealer.</p> <p>Also, if the indicator light/warning light often blinks in RED, the electrical system may be</p>

		malfunctioning. Contact your SUBARU dealer for an inspection.
	<b>X-MODE Indicator</b>	This indicator appears while X-MODE is activated. It will disappear when X-MODE is deactivated.
		
		
	<b>Auto Start-Stop No Activity Detected indicator light</b>	When a vehicle is stopped, the indicator light illuminates when the operating conditions of the Auto Start Stop system are not met. The light will turn off when the vehicle starts driving.
	<b>Depress Brake Indicator Light</b>	<p>This light illuminates if the brake pedal is not depressed in the following conditions.</p> <ul style="list-style-type: none"> <li>- The Auto Vehicle Hold switch is pressed to deactivate the Auto Vehicle Hold function while the vehicle is stopped by the Auto Vehicle Hold function.</li> <li>- The electronic parking brake is released.</li> </ul>

# Questions? Contact us.



[www.obdadvisor.com](http://www.obdadvisor.com)  
[obdadvisor.scanner@gmail.com](mailto:obdadvisor.scanner@gmail.com)