

Warning Lights & Indicators



TABLE OF CONTENTS














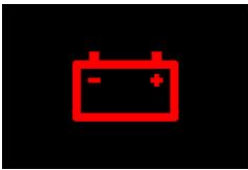


Red Warning Lights	3
--------------------	---




Yellow Warning Lights	5
-----------------------	---








Green Indicators	11
------------------	----






Blue, Gray, & White Indicators	13
--------------------------------	----






Symbol	Name	Meaning
	Brake System Warning Light	<p>Indicates that:</p> <ul style="list-style-type: none"> • The brake fluid level is low; or • The brake system is malfunctioning <p>Immediately stop the vehicle in a safe place and contact your Toyota dealer. Continuing to drive the vehicle may be dangerous.</p>
		
	SRS Warning Light	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> • The SRS airbag system; • The front passenger occupant classification system; or • The seat belt pretensioner system <p>Have the vehicle inspected by your Toyota dealer immediately.</p>
	Parking Brake Indicator	<p>Indicates that the parking brake is engaged. Release the parking brake.</p>
		
	Electric Power Steering System Warning Light	<p>Indicates a malfunction in the EPS (Electric Power Steering) system.</p> <p>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</p>
	Front Seat Belt Reminder Light	<p>The seat belt warning light turns on if the driver or front passenger's seat is occupied and the seat belt is not fastened with the ignition switched ON.</p> <p>If the driver or front passenger's seat belt is unfastened (only when the front passenger's seat is occupied) and if the vehicle is driven at about 20 km/h (12 mph) or faster, or about 10 km/h (6 mph) or faster for a continuous 30 seconds, with the seat belt unfastened, the</p>









		warning light flashes for a certain period. After a short time, the warning light stops flashing, but remains illuminated.
	Rear Seat Belt Reminder Light	<p>Warns the rear passengers to fasten their seat belts.</p> <p>Fasten the seat belt.</p>
		
	Security Indicator	<p>The indicator light flashes after the power switch has been turned off to indicate that the system is operating.</p> <p>The indicator light stops flashing after the power switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.</p>
	High Coolant Temperature Warning Light	<p>Indicates that the engine coolant temperature is too high.</p> <p>-> Immediately stop the vehicle in a safe place.</p>
	Charging System Warning Light	<p>Indicates a malfunction in the vehicle's charging system.</p> <p>Immediately stop the vehicle in a safe place and contact your Toyota dealer.</p>
	Low Engine Oil Pressure Warning Light	<p>Indicates that the engine oil pressure is too low.</p> <p>Immediately stop the vehicle in a safe place and contact your Toyota dealer.</p>
	Open Door Warning Light	<p>Indicates that a door is not fully closed.</p> <p>Check that all the doors are closed.</p>







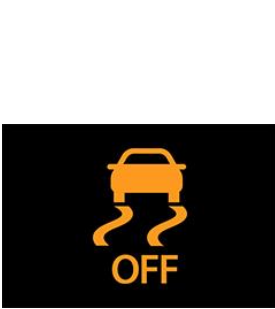
	Unengaged Park Warning Light	Indicates a malfunction in the transmission “Park” mechanism. Have the vehicle inspected by your Toyota dealer immediately.
	Low Engine Oil Level Warning Light	Indicates that engine oil level is low. Check the level of engine oil and add more oil if necessary.
		







Symbol	Name	Meaning
	Brake System Warning Light	Indicates a malfunction in the electric parking brake. Have the vehicle inspected by your Toyota dealer immediately.
	Malfunction Indicator Lamp	Indicates a malfunction in: <ul style="list-style-type: none"> • The electronic engine control system; • The electronic throttle control system; or • The electronic automatic transmission control system Have the vehicle inspected by your Toyota dealer immediately.
		
	Anti-lock Brake System Warning Light	Indicates a malfunction in: <ul style="list-style-type: none"> • The ABS; or • The brake assist system Have the vehicle inspected by your Toyota dealer immediately.
		
	Brake Hold Operated Indicator	Indicates a malfunction in the brake hold system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
	Electric Power Steering System Warning Light	Indicates a malfunction in the EPS (Electric Power Steering) system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.







	Lane Tracing Assist Indicator	<p>Indicates a malfunction in the LTA (Lane Tracing Assist)</p> <p>Follow the instructions displayed on the multi-information display.</p>
	Pre-Crash Safety System OFF Warning Light	<p>Indicates a malfunction in the PCS (Pre-Crash Safety system) or that the system is temporarily unavailable due to the vehicle being extremely hot/cold, or dirt around a front sensor, etc.</p> <p>Follow the instructions displayed on the multi-information display.</p> <p>If the PCS (Pre-Crash Safety system) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate.</p>
	Parking Support Brake OFF Indicator	<p>When a buzzer sounds: Indicates a malfunction in the PKSB (Parking Support Brake) system.</p> <p>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</p> <p>When a buzzer does not sound: Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc.</p> <p>Follow the instructions displayed on the multi-information display.</p>
	Rear Camera Detection OFF Indicator	<p>Indicates a RCD (Rear Camera Detection) function is malfunctioning or disabled.</p> <p>Follow the instructions displayed on the multi-information display.</p>
	Slip Indicator	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> • The VSC system; • The TRC system; or • The hill-start assist control system <p>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</p> <p>The light will flash when the VSC, TRC or ABS system is operating.</p>






	Low Fuel Level Warning Light	Indicates remaining fuel is approximately 9.9 L (2.6 gal., 2.2 Imp.gal.) or less. Refuel the vehicle.
	Master Warning Light	A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
	Tire Pressure Warning Light	When the light comes on: Low tire inflation pressure such as: <ul style="list-style-type: none"> • Natural causes • Flat tire Adjust the tire inflation pressure (including the full-size spare tire) to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system. Have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
	Lane Departure Alert Indicator	The illumination condition of the indicator informs the driver of the system operation status. Flashing in yellow: Lane departure alert function is operating.
	Blind Spot Monitor Indicator	When the Blind Spot Monitor system detects a vehicle, an alert indicator illuminates in the exterior mirror on the side the approaching vehicle is coming from. If you turn the turn signal on for that side of your vehicle, the alert indicator flashes.





	BSM Outside Rear View Mirror Indicator	When The Blind Spot Monitor function and Rear Crossing Traffic Alert function switched on, the BSM indicator illuminates on the meter and the buzzer sounds.
	Airbag ON/OFF Indicator	This indicator light turns on when the airbag system is on (only when the engine switch is in IGNITION ON mode).
		
		
	SPORT Indicator	This light comes on when Sport Mode is selected.
	Low Outside Temperature Indicator	When the outside temperature is approximately 37°F (3°C) or lower, this indicator will flash for approximately 10 seconds, then stay on.
	Four-Wheel Drive Indicator Light	Indicates a malfunction in the four-wheel drive system. Have the vehicle inspected by your Toyota dealer immediately.
	Low Speed Four-Wheel Drive Indicator Light	Indicates a malfunction in the four-wheel drive system. Have the vehicle inspected by your Toyota dealer immediately.


	4 HI Indicator	When you experience a loss of power, such as wheel slipping. The 4HI indicator comes on.
	Rear Differential Lock Indicator Light	Indicates a malfunction in the rear differential lock system. Have the vehicle inspected by your Toyota dealer immediately.
	All-Wheel Drive Lock Indicator	Indicates a malfunction in the four-wheel drive system. Have the vehicle inspected by your Toyota dealer immediately.
	Kinetic Dynamic Suspension System Warning Light	Indicates a malfunction in KDSS. Have the vehicle inspected by your Toyota dealer immediately.
	Automatic Running Boards Indicator Light	Indicates a malfunction in Automatic running boards. Have the vehicle inspected by your Toyota dealer immediately.
	Traction Control OFF Indicator	Turning off the TRAC system, the TRAC OFF indicators will come on.
	Vehicle Stability Control OFF Indicator	This indicator light comes on when the VDC is turned off in the vehicle information display. This indicates the VSC has been turned off. Turn the VSC on using the vehicle information display, or by restarting the engine. The VSC light also comes on when the ignition switch is placed in the ON position. The light will turn off after a period of time if the system is operational. If the light stays on or comes on along with the indicator light while you are driving, have the


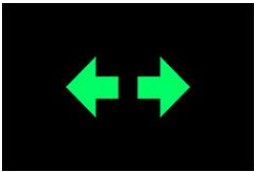
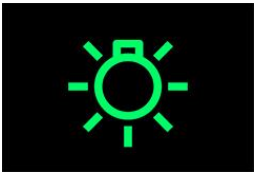
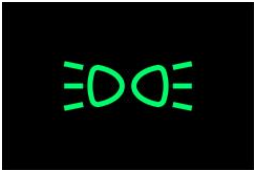



		VSC system checked. It is recommended that you visit a dealer for this service.
	Downhill Assist Control System Indicator	Press the "DAC" switch. The downhill assist control system indicator will come on and the system will operate.
	Auto Limited-Slip Differential Indicator	Press "Slip Indicator" switch to turn on the system. At this time, the "AUTO LSD" and VSC OFF indicators will come on.
	Rear Crossing Traffic Alert OFF Indicator	When a buzzer sounds: Indicates a malfunction in the RCTA (Rear Crossing Traffic Alert) function. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately. When a buzzer does not sound: Indicates that the rear bumper around the radar sensor is covered with dirt, etc. Follow the instructions displayed on the multi-information display
	Stop & Start Indicator	Blinks if there is a problem with the Auto Start-Stop system. Have your vehicle checked by a Toyota dealer.
	Stop & Start Cancel Indicator	Comes on when the Auto Idle Stop system has been turned off by the Auto Start-Stop OFF button.
	Smart Key System Indicator	When starting the hybrid system, Smart entry & start system indicator and a message will be displayed on the multi-information display. If it is not displayed, the hybrid system cannot be started.









	Mud & Sand Mode Indicator	When the switch is pressed while not in Mud & Sand mode, the system switches to Mud & Sand mode and the Mud & Sand mode indicator, VSC OFF indicator and PCS warning light illuminate on the multi-information display or the instrument cluster.
	Rock & Dirt Mode Indicator	When the switch is pressed while not in Rock & Dirt mode, the system switches to Rock & Dirt mode and the Rock & Dirt mode indicator illuminates on the multi-information display.
	Snow Mode Indicator	When the snow mode switch is pressed, the system switches to snow mode and the snow mode indicator illuminates on the multi-information display.
	Automatic Transmission Fluid Temperature Warning Light	<p>When the light comes on: Indicates that the automatic transmission fluid temperature is too high. Immediately stop the vehicle in a safe place, shift the shift lever to P and wait until the light goes off. If the light goes off, you may start the vehicle again. If the light does not go off, contact your Toyota dealer.</p> <p>When the light flashes: Indicates a malfunction in the automatic transmission system. Have the system inspected by your Toyota dealer.</p>
	Low Windshield Washer Fluid Warning Light	Indicates low level of washer fluid. Fill the tank.
	Maintenance Required Remainder Light	<p>Indicates that maintenance is required according to the driven distance on the maintenance schedule.</p> <p>Illuminates for about 3 seconds and then flashes for about 15 seconds approximately 4500 miles (7200 km) after the reminder light has been reset.</p> <p>If necessary, perform maintenance.</p> <p>Comes on and remains on if the distance driven exceeds 5000 miles (8000 km) after the reminder light has been reset. (The indicator will not work</p>








		properly unless the reminder light has been reset.) Perform the necessary maintenance. Please reset the reminder light after the maintenance is performed.
	Tow Haul Indicator	Press the TOW/HAUL switch. The indicator will come on. Use TOW/HAUL mode when pulling a trailer or hauling a heavy load.
	Hybrid System Warning Light	Indicates a malfunction in the hybrid system. Immediately stop the vehicle in a safe place and contact your Toyota dealer.
	Hybrid System Overheat Warning Light	The hybrid system has overheated. This light may come on when driving under severe operating conditions, and the output of the hybrid system may temporarily decrease in order to protect the system. (For example, when driving up a long steep hill or driving up a steep hill in reverse.) Stop and check.
	Led Headlight Warning Light	Indicates a malfunction in the LED headlights. The LED headlights will not normally illuminate when there is a malfunction, however they may be able to illuminate depending on the nature of the problem. Have the vehicle inspected by your Toyota dealer immediately.
	Parking Lock System Warning Light	Indicates a malfunction in the shift control system <ul style="list-style-type: none"> • In this situation, there is a possibility that the parking lock mechanism will not work. When parking, park the vehicle on a flat surface and apply the parking brake securely. • The power switch may not be turned off. If this happens, applying the parking brake will enable the switch to be turned off. Have the vehicle inspected by your Toyota dealer immediately.






	<p>Go To Service Warning Light</p>	<p>Indicates that maintenance of the hybrid battery (traction battery) cooling component is required.</p> <p>The filter may be clogged, the air intake vent may be blocked or there may be a gap in the duct.</p> <p>Have maintenance performed on the hybrid battery (traction battery) cooling component at your Toyota dealer.</p>
	<p>Automatic Headlight Leveling System Warning Light</p>	<p>Indicates a malfunction in the automatic headlight leveling system.</p> <p>Have the vehicle inspected by your Toyota dealer immediately.</p>
	<p>"RSCA OFF" Indicator</p>	<p>When deactivating the curtain shield airbags in a vehicle rollover, the "RSCA OFF" indicator turns on (only when the engine switch is in IGNITION ON mode.)</p> <p>The roll sensing function for the curtain shield airbags and seat belt pretensioners will turn back on automatically each time the engine switch is turned to IGNITION ON mode.</p> <p>■ This switch only should be used</p> <p>In a situation where the inflation is not desired (such as during extreme offroad driving).</p> <p>■ Operating conditions when the "RSCA OFF" indicator is on</p> <ul style="list-style-type: none"> • The curtain shield airbags and seat belt pretensioners will not activate in a vehicle rollover. • The curtain shield airbags will activate in a severe side impact. • The seat belt pretensioners will activate in a severe frontal collision.
	<p>Output Control Warning Light</p>	<p>EV system power available is low (due to the amount of charge remaining in the traction battery being low, or low temperature or high temperature).</p> <p>Charge the vehicle.</p>



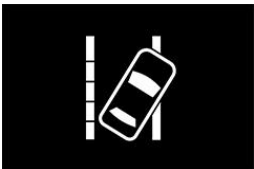
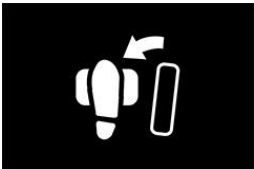
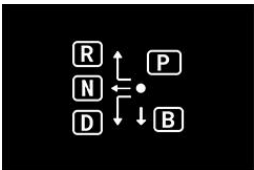
	State Of Charge Warning Light	<p>The amount of charge remaining in the traction battery has fallen to the SOC gauge's 2 lowest segments.</p> <p>Charge the vehicle.</p>
---	--	---

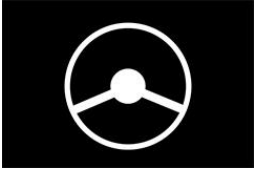


Symbol	Name	Meaning
	Intuitive Parking Assist OFF Indicator	When the intuitive parking assist function is disabled, the intuitive parking assist OFF indicator illuminates.
	Turn Signal Indicator	<p>Turn signals can be operated when The engine switch is in IGNITION ON mode.</p> <p>If the indicator flashes faster than usual Check that a light bulb in the front or rear turn signal lights has not burned out.</p> <p>If the turn signals stop flashing before a lane change has been performed. Operate the lever again.</p>
	Headlight Indicator	When the headlights are switched on, the indicator light appears.
	Tail Light Indicator	The front position, tail, license plate and instrument panel lights turn on.
	Automatic High Beam Indicator	<p>The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.</p> <p>The Adaptive High-beam System indicator will come on when the headlights are turned on automatically to indicate that the system is active.</p>
		
	ECO Driving Indicator	During Eco-friendly acceleration (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds the Zone of Eco driving, or when the vehicle is stopped, the light turns off.

	Brake Hold Standby Indicator	Turns the brake hold system on, the brake hold standby indicator comes on.
	Cruise Control Indicator	Press the driving assist mode select switch to select cruise control. The cruise control indicator will illuminate.
		
	Dynamic Radar Cruise Control Indicator	Press the driving assist mode select switch to select dynamic radar cruise control. The dynamic radar cruise control indicator will illuminate.
	Cruise Control SET Indicator	Press the driving assist mode select switch to select Cruise control "SET". The Cruise control "SET" indicator will illuminate.
	Lane Tracing Assist Indicator	The illumination condition of the indicator informs the driver of the system operation status. Illuminated in green: Steering wheel assistance of the steering assist function or lane centering function is operating.
	Rear Crossing Traffic Alert Indicator	When the RCTA function is turned on, the indicator illuminates.
	ECO MODE Indicator	Use Eco mode to help achieve low fuel consumption during trips that involve frequent accelerating. When not in Eco drive mode and the driving mode select switch is turned to the left, the "ECO"

		indicator comes on in the multi-information display.
	READY Indicator	Comes on when the vehicle is ready to drive.
	POWER MODE Indicator	When the “PWR” switch is pressed, the “PWR MODE” indicator comes on in the instrument cluster.
		
	Multi-terrain Select Indicator Light	Multi-terrain Select indicator comes on when pressing Multi-terrain Select switch.
	Front Fog Light Indicator	The fog lamp light comes on when the fog lamps are in use. The light goes out when the fog lamps are turned off.
	A-TRAC Indicator	Press the “A-TRAC” switch to activate the system. At this time, the “A-TRAC” indicator will come on.
	Crawl Control Indicator	The Crawl Control indicator comes on and the slip indicator flashes when pressing Crawl Control switch.

	Brake Hold Operated Indicator	Comes on when the automatic brake hold is activated.
	Second Start Mode Indicator	This indicator illuminates when pressing Second start mode switch
	Downhill Assist Control System Indicator	<p>Press the “DAC” switch.</p> <p>The downhill assist control system indicator will come on to indicate that the downhill assist control system is activated.</p> <p>Pressing the switch again turns the system off.</p>
	Plug-in Indicator	When plugging in the charging cable has been completed correctly, the plug-in indicator on the meter comes on in green. If there has been a problem with plugging in, the plug-in indicator comes on in yellow.
	EV Indicator	This illuminates to indicate the vehicle is being driven powered only by the motor.

Symbol	Name	Meaning
	Headlight High Beam Indicator	<p>This blue light comes on when the headlight high beams are on and goes out when the low beams are selected.</p> <p>The high beam indicator light also comes on when the passing signal is activated.</p>
	Low Engine Coolant Temperature Indicator	<p>The light illuminates continuously when the engine coolant temperature is low and turns off after the engine is warm.</p> <p>If the low engine coolant temperature indicator light remains illuminated after the engine has been sufficiently warmed up, the temperature sensor could have a malfunction. Consult an Authorized Toyota Dealer.</p>
	Lane Tracing Assist Indicator	<p>The illumination condition of the indicator informs the driver of the system operation status. Illuminated in white: LTA system is operating.</p>
	Inappropriate Pedal Operation Warning Light	<p>When a buzzer sounds:</p> <ul style="list-style-type: none"> • Brake Override System is malfunctioning; • Drive-Start Control is operating; • Drive-Start Control is malfunctioning; or <p>Follow the instructions displayed on the multi information display.</p> <p>When a buzzer does not sound:</p> <p>Brake Override System is operating. Release the accelerator pedal and depress the brake pedal.</p>
	Shift Position Indicator	<p>The position of the frame on the shift position indicator changes in accordance with the current shift position.</p> <p>When a shift position other than D or B is selected, the arrow toward B and B position indicator disappear from the shift position indicator.</p> <p>When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument panel.</p>

	Steering Control Indicator	When the steering wheel assistance of the steering assist function is operating, the indicator illuminates and the operation display on the multi-information display is turned on.
	S-IPA Indicator	Displayed when the assist mode can be changed and the system can be turned off or on using the S-IPA switch.
	Speed Limiter Indicator	Press the "ON-OFF" button to activate the speed limiter. Then, this light will illuminate.

Questions? Contact us.



www.obdadvisor.com
obdadvisor.scanner@gmail.com