

 
Dashboard warning light	Name	Message
	Charging System Trouble Light	Serious Charging System problem. The vehicle should be brought to a complete stop as quickly as possible or the vehicle may simply stop running.
	Charging System Trouble Light	The vehicle's hybrid battery must be serviced by your dealer or qualified service professional as soon as possible.
	Brake Trouble Light	A serious problem with the brakes. The light will also be on when the hand, or emergency, brake is engaged.
	Brake Trouble Light	A serious problem with the brakes. The light will also be on when the hand, or emergency, brake is engaged.
	Brake Trouble Light	A serious problem with the brakes. The light will also be on when the hand, or emergency, brake is engaged.
	Oil Warning Lights	Without the wavy line, your engine is telling you that the oil pressure is low.
	Oil Warning Lights	A wavy line below the oil can indicates the oil level is low.
	Oil Warning Lights	If it is seen on the instrument panel, pull over and shut down the engine as soon as possible to allow it to cool down.
	Temperature Warning Indicators	The engine temperature is too high. Should stop the vehicle and turn off the engine. Turning on the heater to the highest setting will remove some of the heat as well.
	Power Steering Trouble Light	
	Power Steering Trouble Light	Pull over as soon as possible and shut down the engine and restart it.
	SRS Air Bag Indicator	A problem exists with one of the many airbags in the vehicle, which should be taken to the dealer or authorized service center as soon as possible.
	SRS Air Bag Indicator	A problem exists with one of the many airbags in the vehicle, which should be taken to the dealer or authorized service center as soon as possible.
	Seat Belt Reminder Indicator	The indicators simply want you to put on your seat belt.
	Seat Belt Reminder Indicator	Showing two belted occupants, indicates either the driver or passenger is unbuckled. Regardless, the indicators simply want you to put on your seat belt.
	Security and Immobilizer System Indicator	The ignition switch is locked and will need the proper transponder-equipped key fob to start or re-start.
	Security and Immobilizer System Indicator	The ignition switch is locked and will need the proper transponder-equipped key fob to start or re-start.
	Security and Immobilizer System Indicator	Indicates a malfunction in the security system.
	Door Ajar and Other Open Indicator	Close the door, trunk lid, rear hatch, hood, or whatever is shown as open as soon as possible.
	Door Ajar and Other Open Indicator	The ignition is on and Driver's Door is the one open. So long as the vehicle is not in gear, there should be nothing to be concerned about.
	Hood Ajar indicators	Be sure the hood is closed and/or that nothing is preventing the hood from fully closing.
	Master Warning Light Indicators	Simple reminders such as a door ajar or that it is time to change the oil.

 
 
	Electric Park Brake and Fault Indicator	Service is needed.
	Electric Park Brake and Fault Indicator	Service is needed.
	Keyless Ignition Detection Indicator	Indicates that the key is not detected.
	Tire Pressure Monitoring System Indicator	The pressure in a tire can be very, very low and not result in a large change in the handling of some vehicles.
	A/T Park Warning Indicator	A vehicle's 4 wheel drive shifter is in neutral (N). A drive gear cannot be engaged until either the 4 Low or the 4 High option is chosen.
	Transmission Oil Temperature Indicators	The oil temperature in the transmission is too high, which risks transmission failure.
	Transmission Oil Temperature Indicators	The oil temperature in the transmission is too high, which risks transmission failure.
	Transmission Oil Temperature Indicators	A transmission in a number of instances. Again, pull over and allow the transmission to cool down or there is a risk of failure.
	Lane Departure Warning Indicators	The vehicle crosses the line without having used a turn signal.
	Collision Warning System and Malfunction Indicators	The system has been deactivated.
	Collision Warning System and Malfunction Indicators	The system has been deactivated.
	Second Row or Rear Seat Safety Belt Indicator	Warn rear seat passengers to buckle up.
	Second Row or Rear Seat Safety Belt Indicator	Indicate which belt is undone, one through three.

 
Dashboard warning light	Name	Message
	Electric Park Brake and Fault Indicator	Service is needed.
	Electric Park Brake and Fault Indicator	Service is needed.
	Electric Park Brake and Fault Indicator	Service is needed.
	Electric Park Brake and Fault Indicator	Service is needed.
	Electric Park Brake and Fault Indicator	Service is needed.
<b>PARK</b>	Electric Park Brake and Fault Indicator	The brake is engaged and the ignition on.
<b>OIL LEVEL</b>	Oil Warning Lights	An admonition to check the oil. If the oil level is good, the engine needs servicing as soon as possible as an oil pump failure is likely and will lead to serious engine damage.
<b>LOW OIL PRESSURE</b>	Oil Warning Lights	An admonition to check the oil. If the oil level is good, the engine needs servicing as soon as possible as an oil pump failure is likely and will lead to serious engine damage.
	Oil Warning Lights	The engine's RPM has been reduced. Low oil pressure can result in serious engine damage, even at reduced RPMs, so have the engine serviced as soon as possible.
<b>HOT COOLANT TEMP</b>	Temperature Warning Indicators	The engine temperature is too high. Stop the vehicle and turn off the engine. Turning on the heater to the highest setting will remove some of the heat as well.
	Temperature Warning Indicators	Fuel having entered the engine oil. Run the engine until warm to allow the fuel to evaporate. Also, avoid running at a high rpm as well.
<b>PS</b>	Power Steering Trouble Light	
	SRS Air Bag Indicator	A problem exists with one of the many airbags in the vehicle, which should be taken to the dealer or authorized service center as soon as possible.
	Second Row or Rear Seat Safety Belt Indicator	A rear seat passenger is detected
	Security and Immobilizer System Indicator	The ignition switch is locked and will need the proper transponder-equipped key fob to start or re-start.
	Sunroof Open indicators	Close the sunroof if you wish.
	Fuel, Low Fuel, and Fuel Sensor Indicators	
	Fuel, Low Fuel, and Fuel Sensor Indicators	
	Fuel, Low Fuel, and Fuel Sensor Indicators	

 
	Low Windshield Washer Fluid Indicators	Fill the windshield washer fluid reservoir as soon as possible.
	Low Windshield Washer Fluid Indicators	Fill the windshield washer fluid reservoir as soon as possible.
	Low Windshield Washer Fluid Indicators	Fill the windshield washer fluid reservoir as soon as possible.
	Low Windshield Washer Fluid Indicators	Fill the windshield washer fluid reservoir as soon as possible.
	Frost or Cold Warning or Snow Mode Indicator	The outside temperature drops to within a few degrees of freezing (about 40F).
	Frost or Cold Warning or Snow Mode Indicator	Indicate cold weather and the possibility of frost on the roadway.
	Frost or Cold Warning or Snow Mode Indicator	Indicate cold weather and the possibility of frost on the roadway.
	Master Warning Light Indicator	Indicates a fault in the vehicle, Ås Stability Control System, as well as a slip indicator.
	Check Engine Light	
	Check Engine Light	
	Check Engine Light	
	Check Engine Light	
	Brake Override System Indicators	If a buzzer is not heard, the brake override system is operating. It turned off by releasing the accelerator pedal and stepping on the brake pedal.
	Keyless Ignition Detection Indicator	Indicate the presence of an electronic key in a push button or, ironically, keyless start, or keyless ignition, vehicle.
	Keyless Ignition Detection Indicator	Indicate the presence of an electronic key in a push button or, ironically, keyless start, or keyless ignition, vehicle.
	Keyless Ignition Detection Indicator	Indicate the presence of an electronic key in a push button or, ironically, keyless start, or keyless ignition, vehicle.
	Keyless Ignition Detection Indicator	Indicate a weak fob battery
	Keyless Ignition Detection Indicator	Indicates that the fob is not detected or has been removed from the vehicle.
	Maintenance or Service Required Indicators	Reminder that routine maintenance is needed, such as an oil change, although the car on the lift could suggest a more serious problem.
	Maintenance or Service Required Indicators	Reminder that routine maintenance is needed, such as an oil change, although the car on the lift could suggest a more serious problem.

 
	Maintenance or Service Required Indicators	Indicate that one of the vehicle's systems has failed and needs repair.
<b>MAINT REQD</b>	Maintenance or Service Required Indicators	Contact your dealer or authorized service center as soon as possible.
	Slip, Stability Control and Fault Indicator	When a vehicle detects slippery conditions, its stability or traction control system is activated. The light will flash, irregularly in some vehicles, indicating that the system is doing its work, helping to keep the vehicle in control.
<b>ESC</b>	Slip, Stability Control and Fault Indicator	When a vehicle detects slippery conditions, its stability or traction control system is activated. The light will flash, irregularly in some vehicles, indicating that the system is doing its work, helping to keep the vehicle in control.
<b>LOW TRAC</b>	Slip, Stability Control and Fault Indicator	When a vehicle detects slippery conditions, its stability or traction control system is activated. The light will flash, irregularly in some vehicles, indicating that the system is doing its work, helping to keep the vehicle in control.
<b>ESP</b>	Slip, Stability Control and Fault Indicator	When a vehicle detects slippery conditions, its stability or traction control system is activated. The light will flash, irregularly in some vehicles, indicating that the system is doing its work, helping to keep the vehicle in control.
	Stability Control Off Indicators	The stability control system is deactivated.
<b>ESC OFF</b>	Stability Control Off Indicators	The stability control system is deactivated.
<b>ESP OFF</b>	Stability Control Off Indicators	The stability control system is deactivated.
	Tire Pressure Monitoring System Indicators	The inflation on one of the tires is reduced about 25% or more. In most cases, that will be about eight pounds
	Tire Pressure Monitoring System Indicators	The system needs to be reset or could mean that a tire is low as well. Regardless, the tire pressures must be checked for the sake of safety.
<b>ABS</b>	Antilock Braking System Trouble Lights	The ABS system helps to keep the car from skidding out of control during braking in slippery or extreme braking conditions by limiting your wheels from locking up.
	Antilock Braking System Trouble Lights	The ABS system helps to keep the car from skidding out of control during braking in slippery or extreme braking conditions by limiting your wheels from locking up.
<b>ANTILOCK</b>	Antilock Braking System Trouble Lights	In slippery conditions, the driver must control any tendency for the wheels to lock during braking.
	Antilock Braking System Trouble Lights	Indicate a problem with the 4- or All-wheel Drive system as well as the ABS System. If this is the case, one or more additional indicators will be present. Have the vehicle checked as soon as possible by a competent shop.
<b>ABS ACTIVE</b>	Antilock Braking System Trouble Lights	Come on when the ABS system is simply doing its job . It does not indicate a fault
<b>A/T OIL TEMP</b>	Transmission Oil Temperature Indicators	The oil temperature in the transmission is too high
	Blind Spot Warning or Monitoring System	A vehicle is detected in the blind spot.

	Blind Spot Warning or Monitoring System	Indicated by a separate alert and text message in the instrument panel.
	Blind Spot Warning or Monitoring System	A vehicle is detected in the blind spot.
	Lane Departure Warning Indicators	The vehicle is traveling close to either the left or the right of the traveling lane.
	Lane Departure Warning Indicators	The vehicle is traveling close to either the left or the right of the traveling lane.
	Lane Departure Warning Indicators	The vehicle is traveling close to either the left or the right of the traveling lane.
	Collision Warning System and Malfunction Indicators	When the brakes are applied automatically, which would be obvious if it occurred!
	Brake Hold Indicator	Indicate a fault in the system
	Brake Hold Indicator	Indicate a fault in the system
	Active or Advanced Cruise Control Indicators	Intended to imply a forward looking radar.
	4 Wheel Drive Indicators	Indicates that the 4 wheel drive is engaged at a low gear ratio. It is useful when maximum power or traction is needed for steep climbs, sandy or muddy conditions, or off-road driving.
	4 Wheel Drive Indicators	Indicates that the 4 wheel drive is engaged at a low gear ratio. It is useful when maximum power or traction is needed for steep climbs, sandy or muddy conditions, or off-road driving.
	4 Wheel Drive Indicators	Indicates that the 4 wheel drive is engaged at a low gear ratio. It is useful when maximum power or traction is needed for steep climbs, sandy or muddy conditions, or off-road driving.
	4 Wheel Drive Indicators	Indicates that the 4 wheel drive is engaged at a low gear ratio. It is useful when maximum power or traction is needed for steep climbs, sandy or muddy conditions, or off-road driving.
	Differential and Axle Lock Indicators	The option to lock the differential may be available in an all-wheel drive vehicle. Turn it on only if you become stuck in mud or snow, or if you are driving on a loose surface off road at low speeds. A symbol featuring all four wheels will appear on th
	Differential and Axle Lock Indicators	The option to lock the differential may be available in an all-wheel drive vehicle. Turn it on only if you become stuck in mud or snow, or if you are driving on a loose surface off road at low speeds. A symbol featuring all four wheels will appear on th
	Differential and Axle Lock Indicators	The option to lock the differential may be available in an all-wheel drive vehicle. Turn it on only if you become stuck in mud or snow, or if you are driving on a loose surface off road at low speeds. A symbol featuring all four wheels will appear on th

	Active, Adaptive and Cornering Light Malfunction	
	Active, Adaptive and Cornering Light Malfunction	
	Active, Adaptive and Cornering Light Malfunction	
	Lamp Out Indicator Symbol	One or more of the headlamp bulbs or other bulbs is burned out or malfunctioning
	Lamp Out Indicator Symbol	One or more of the headlamp bulbs or other bulbs is burned out or malfunctioning
	Power and Sport Mode Indicators	
	Automatic Shift Lock / Engine Start Operation Symbols	The brake must be stepped on to release the lock and shift the transmission into drive or reverse
	Automatic Shift Lock / Engine Start Operation Symbols	The brake must be stepped on to release the lock and shift the transmission into drive or reverse
	Automatic Shift Lock / Engine Start Operation Symbols	The brake must be stepped on to release the lock and shift the transmission into drive or reverse
	Power Top Trouble Indicators	Indicate trouble with the power top system, before the top is opened or closed.
	Power Top Trouble Indicators	Indicate trouble with the power top system, before the top is opened or closed.
	i-ACTIVSENSE Warning	The light will be seen if the system has a malfunction
	All Wheel Drive Trouble Indicators	Be on when All-Wheel Drive is disengaged and the drive mechanism is switched to Front Wheel Drive for maintenance or if there is a problem with the system
	All Wheel Drive Trouble Indicators	Be on when All-Wheel Drive is disengaged and the drive mechanism is switched to Front Wheel Drive for maintenance or if there is a problem with the system
	All Wheel Drive Trouble Indicators	Be on when All-Wheel Drive is disengaged and the drive mechanism is switched to Front Wheel Drive for maintenance or if there is a problem with the system
	All Wheel Drive Trouble Indicators	Be on when All-Wheel Drive is disengaged and the drive mechanism is switched to Front Wheel Drive for maintenance or if there is a problem with the system
	Exhaust Particulate Filter Warning Indicators	Regeneration is needed, which is done automatically while driving
	Exhaust Particulate Filter Warning Indicators	Regeneration is needed, which is done automatically while driving
	Traction and Active Traction Control Indicators	Indicates the system is on and functioning or that the system has a malfunction
	Traction and Active Traction Control Indicators	Indicates the system is on and functioning or that the system has a malfunction
	Traction and Active Traction Control Indicators	Indicates the system is on and functioning or that the system has a malfunction

	Traction and Active Traction Control Indicators	Indicates the system is on and functioning or that the system has a malfunction
	Traction and Active Traction Control Indicators	Indicates the system is on and functioning or that the system has a malfunction
	Check Gas Cap Indicators	
	Check Gas Cap Indicators	
	Check Gas Cap Indicators	
	Check Gas Cap Indicators	
	Check Gas Cap Indicators	
	Automatic Transmission Warning Indicators	Indicates an electrical, rather than a mechanical, problem with the transmission. Continuing to drive could cause damage to the transmission that would likely be very expensive to repair
	Automatic Transmission Warning Indicators	Indicates an electrical, rather than a mechanical, problem with the transmission. Continuing to drive could cause damage to the transmission that would likely be very expensive to repair

Dashboard warning light	Name	Message
	Security and Immobilizer System Indicator	The ignition switch is locked and will need the proper transponder-equipped key fob to start or re-start. Flash when the vehicle is immobilized.
	Keyless Ignition Detection Indicator	Indicate the presence of an electronic key in a push button or, ironically, keyless start, or keyless ignition, vehicle.
	Cruise or Speed Control Text Indicators	The cruise control is engaged. It is perfectly straightforward, as opposed to the two image symbols below that are now often used in its place.
	Cruise or Speed Control Text Indicators	The cruise control is engaged. It is perfectly straightforward, as opposed to the two image symbols below that are now often used in its place.
	Cruise or Speed Control Text Indicators	A speed is set
	Cruise or Speed Control Text Indicators	The cruise control is engaged. It is perfectly straightforward, as opposed to the two image symbols below that are now often used in its place.
	Active or Advanced Cruise Control Indicators	The system is responding to traffic ahead and the arrow indicates a speed has been set.
	Active or Advanced Cruise Control Indicators	The system is responding to traffic ahead and the arrow indicates a speed has been set.
	Tow or Haul Mode and Fault Indicators	If your vehicle is equipped with Tow Mode, one of these lights will be lit when the mode is selected.
	Tow or Haul Mode and Fault Indicators	Find the proper switch to turn it off, or, lacking a switch, check with a service center.
	Automatic Headlight Dimmer or Malfunction Indicator	Indicates that the high beams are on and that the system will automatically (AUTO or A) switch between the low and high headlight beams on the automobile depending on whether or not sensors detect oncoming vehicle head lights in the distance.
	Automatic Headlight Dimmer or Malfunction Indicator	Indicates that the high beams are on and that the system will automatically (AUTO or A) switch between the low and high headlight beams on the automobile depending on whether or not sensors detect oncoming vehicle head lights in the distance.
	Automatic Headlight Dimmer or Malfunction Indicator	Indicates that the high beams are on and that the system will automatically (AUTO or A) switch between the low and high headlight beams on the automobile depending on whether or not sensors detect oncoming vehicle head lights in the distance.
	Fog Lamp Indicator	The fog lamps are activated.
	Park Lamp or Tail Light (Canada) Indicator	All the lights, except the headlights, are in use.
	Turn Signal Indicator	
	Snow Mode Indicator	Indicates that Snow mode is active

	Drive Mode Indicator	
	Drive Mode Indicator	
	Drive Mode Indicator	
	Drive Mode Indicator	
	Drive Mode Indicator	
	Drive Mode Indicator	
	Auto Brake Hold Indicator	The indicator is on in green when the system is activated
	Auto Brake Hold Indicator	The indicator is on in green when the system is activated

Dashboard warning light	Name	Message
	Temperature Warning Indicator	Indicates that the coolant temperature is below what is needed for optimum performance.
	Frost or Cold Warning or Snow Mode Indicator	Some charge in the main EV battery may be lost or unavailable due to cold weather. The owners manual will offer methods for warming the battery.
	Automatic Headlight Dimmer or Malfunction Indicator	The high beams are on and that the system will automatically (AUTO or A) switch between the low and high headlight beams on the automobile depending on whether or not sensors detect oncoming vehicle head lights in the distance.
	Automatic Headlight Dimmer or Malfunction Indicator	The high beams are on and that the system will automatically (AUTO or A) switch between the low and high headlight beams on the automobile depending on whether or not sensors detect oncoming vehicle head lights in the distance.
	High or Low Beam on Indicators	The light is active only when the high beams are active (turned on) and has been a standard in vehicles for decades.
	High or Low Beam on Indicators	The light is active only when the high beams are active (turned on) and has been a standard in vehicles for decades.

Dashboard warning light	Name	Message
	Drivetrain, Shift or Powertrain Trouble	Indicate that the transmission is overheated or there is a park lock malfunction or a major transmission malfunction.
	Drivetrain, Shift or Powertrain Trouble	Indicate that the transmission is overheated or there is a park lock malfunction or a major transmission malfunction.
	Lane Departure Warning Indicators	The vehicle is traveling close to either the left or the right of the traveling lane. The vehicle is traveling close to either the left or the right of the traveling lane.
	Lane Departure Warning Indicators	The vehicle is traveling close to either the left or the right of the traveling lane.
	Active or Advanced Cruise Control Indicator	The system is turned on and amber when actually adjusting the distance to a vehicle ahead.
	Automatic/Active Speed Limiter or Malfunction Indicator	A speed is set.
	Automatic/Active Speed Limiter or Malfunction Indicator	A speed is set.
	Automatic Headlight Dimmer or Malfunction Indicator	the high beam system off. The park lights are on
	Power and Sport Mode Indicator	
	Brake Override System Indicator	If a buzzer is not heard, the brake override system is operating. It turned off by releasing the accelerator pedal and stepping on the brake pedal.